



[Reading the display]

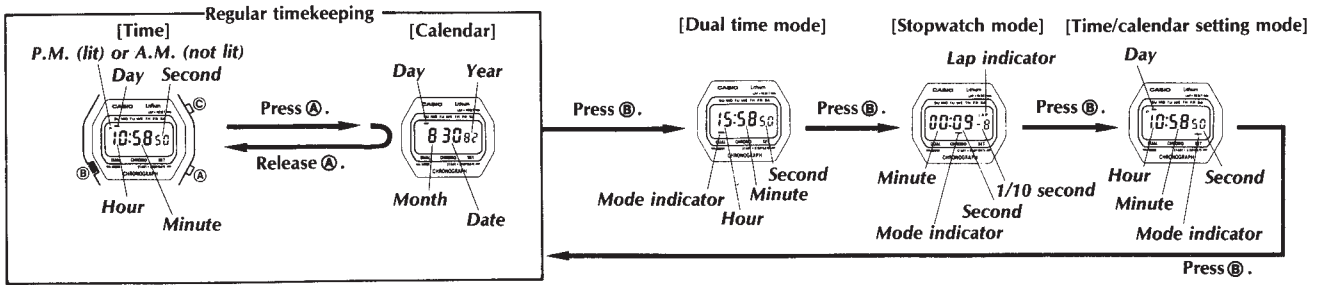

SU: Sunday MO: Monday TU: Tuesday WE: Wednesday TH: Thursday
 FR: Friday SA: Saturday
 (Auto-retrieve function) Daily alarm and Time/calendar setting modes will automatically return to the regular timekeeping mode in 1 or 2 minutes.


[Setting time and calendar]

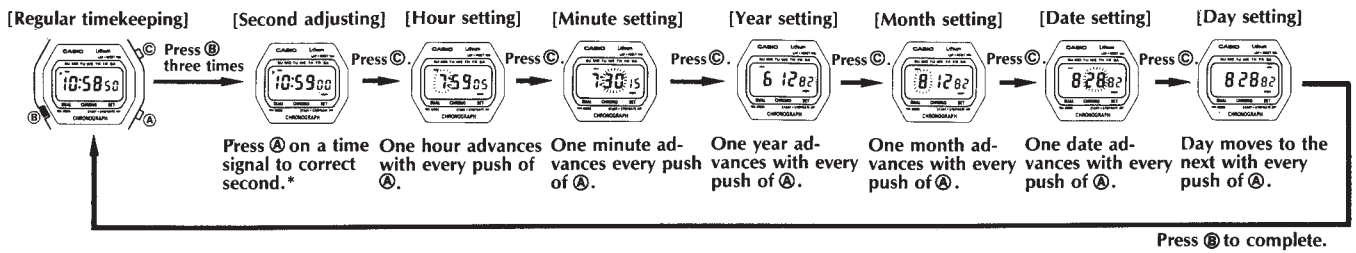

*Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc.

(Quick digit advance) When the (A) button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.
 (Independent correction) Correction of any digit, if not required, can be skipped by pressing the (C) button repeatedly.
 (Reversion to regular timekeeping mode) The watch reverts to the regular timekeeping mode if the (B) button is pressed, regardless of the digit setting mode.
 (Auto-retrieve function) When setting the watch, if you leave it alone for 1 to 2 minutes, the display will automatically return to the regular timekeeping mode.

[Presetting dual time]

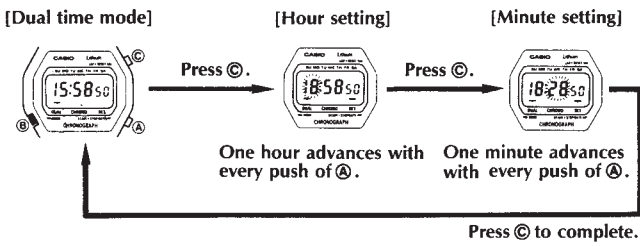

The dual time mode works in a 24-hour format.

[Stopwatch operation]



(Working range) The stopwatch display is limited to 59 minutes 59.9 seconds, for longer times reset and start again.

