



CASIO

Module No. 812


DI

User's Guide
Guide de l'utilisateur
Guía del propietario
Guia do proprietário
使用方法
نشرة صغار

Warranty Certificate
Certificat de garantie
Certificado de garantía
Certificado de Garantia
إشهاد استخدام

READING THE DISPLAY

Press the **ⓐ** button to see an outline of each function. Each function will be explained in the following pages.

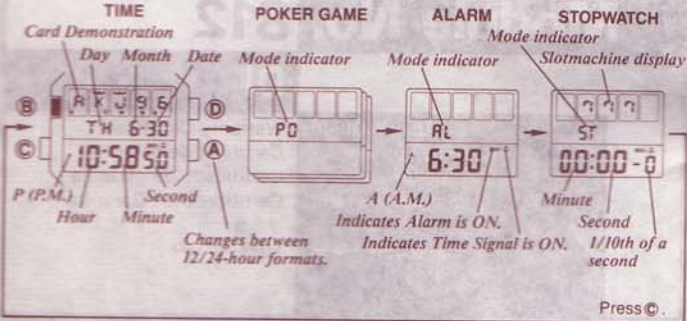

PLAYING THE POKER GAME

This poker game consists of 3 levels (MACAO, LAS VEGAS, MONTE CARLO) including 10 rounds each. The minimum that can be bet on a hand is \$10, and the maximum is \$300. If you have less than \$300 left, the amount left is the maximum bet for you.

STARTING THE GAME

1) Press **ⓐ** to change from TIME mode to GAME mode and the game will start automatically.

The previous high level and high score will appear.

- MAC: MACAO
- LAS: LAS VEGAS
- MON: MONTE CARLO

The game starts from MACAO-1.

Both you and the dealer start out with \$1,000 each.

After your cards are dealt, your current hand will be shown in the lower left of the display.
* If you are satisfied with your cards, press **ⓐ** to advance into the betting stage.

2) Press **ⓐ** once to get ready to draw cards. To draw a new card, press **ⓐ** at the flashing position. If not necessary to replace, press **ⓐ** to advance the flashing position. Repeat the process until you reach the fifth card.

3) Press either **ⓐ** or **ⓐ** to advance to the betting mode.

The dealer makes the first bet. You can call, raise or drop out.

4) TO RAISE THE BET

- First press **ⓐ** to go with the dealer's bet.
- Press **ⓐ** again to raise the bet.

Keep pressed to raise the amount quickly.

TO CALL

c) Press **ⓐ** to call.

The dealer will call, raise, or drop out. If the dealer raises, you again have the option to call, raise or drop out.

TO DROP OUT OF A HAND

d) Press **ⓐ** immediately after the dealer makes a bet to drop out of the hand.
You will lose any money that you have bet when you drop out.
The one who drops will lose all the latest amount that is bet during that round.
* Even if you have not made any bet, your money total will be reduced by \$10 if you drop out.

e) If the dealer drops out, the amount of money bet by the dealer will be added to your money total.

You automatically advance to the next level when your money total at the end of a level is greater than that of the dealer. You also immediately advance to the next level when you succeed in winning all of the dealer's money.

5) Press **ⓐ** to replay.

GAME OVER

The game ends when:

- You have less money than the dealer has at the end of a level.
- You lose all of your money.
- You finish the final round of the MONTE CARLO level.

TABLE OF HANDS

The following table describes the strength of

- ★ ROYAL FLUSH (RF)
10, J, Q, K, A of the same suit.
- ★ STRAIGHT FLUSH (SF)
Five cards with of the same suit in series.
- ★ FOUR OF A KIND (4C)
Four cards with the same number.
- ★ FULL HOUSE (FH)
Three of a kind plus a pair.
- ★ FLUSH (FL)
Five cards of the same suit.

*** STRAIGHT (ST)**

Five cards of different suit in series.



*** THREE OF A KIND (3C)**

Three cards with the same number.



*** TWO PAIRS (2P)**

Two cards with one number & two cards with another number.



*** ONE PAIR (1P)**

Two cards with the same number.



*** NO PAIRS (-)**

None of the combinations.

 


OPERATING DAILY ALARM

Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press any button to stop the beeper. Signal sounds at the beginning of every hour if time signal is set.

SETTING ALARM TIME

- 1) Press **A** in the daily alarm mode.
- 2) Press **C** to shift flashing position. The digit(s) to be changed will flash.

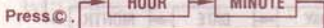

- 3) Each press of **A** corrects digits one by one. Keep pressed for quick correction.
- 4) Press **B** to complete the setting.

SOUND DEMONSTRATION

Press and hold **A** in the alarm mode to sound the beeper.
 * Display automatically returns to initial daily alarm display if left unused for a few minutes.

SETTING TIME AND DATE



- 1) Press **A** in the regular timekeeping mode.
- 2) Press **A** on a time signal to correct seconds.
- 3) Press **C** to shift flashing position. The digit(s) to be changed will flash.



- 4) Each press of **A** corrects digits one by one. Keep pressed for quick correction.
- 5) Press **B** to complete the setting.

* Display automatically returns to time display if left unused for a few minutes.

CARE OF YOUR WATCH

- Battery life is calculated from when the battery is loaded at the factory. At first sign of power fade (dim display), have battery replaced at dealer or Casio distributor.
- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- Watches are ranked A through C according to the water resistance chart below. Check the ranking of your watch to determine proper use.

Rank	Case Designation	Splashes, rain, etc.	Swimming, car-washing, etc.	Snorkeling, diving, etc.	Scuba diving
A*	—	No	No	No	No
B	WATER RESISTANT	Yes	No	No	No
C**	50M WATER RESISTANT	Yes	Yes	No	No

- * This watch is not water-resistant, so be careful not to get it wet.
- ** Caution—50 metres water resistant models—do not operate push buttons below the surface of the water.
- A waterproof rubber seal is used to guard against water and dust. As rubber deteriorates with time, the seal should be replaced periodically (every 2–3 years).
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid exposing the watch to temperature extremes.

ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL



- Both daily alarm and time signal sound.
- Both daily alarm and time signal do not sound.
- Daily alarm only sound.
- Time signal only sound.

USING STOPWATCH



The stopwatch measures time in 1/10 sec. units up to 60 minutes, then resets and starts again.

- Press **A** to start or stop.
- Press **B** to reset when the stopwatch is stopped.

Slotmachine display

You can enjoy playing slotmachine in this stopwatch mode. (Inoperative)
 Every time the stopwatch starts, the 3 characters shown in the upper display will change until you press **A** again to stop.
 The characters consists of 1 2 3 4 5 6 7 8 9 0 - -

WARRANTY CERTIFICATE

THIS WARRANTY CERTIFICATE IS VALID ONLY FOR SERVICE IN THE COUNTRY OF PURCHASE.

Should this watch malfunction under normal use, it will be repaired without charge for a period of one year from the date of purchase. If the watch requires service within the warranty period, request repair or adjustment at the store where purchased or the authorized Casio watch distributor, presenting the watch together with this warranty certificate. The customer shall not have any claim under this warranty for repair or adjustment expenses if:

- (1) The trouble is caused by improper, rough or careless treatment.
- (2) The trouble is caused by a fire or other natural calamity.
- (3) The trouble is caused by improper repair or adjustment made by anyone other than the authorized Casio watch distributor or its retailers.
- (4) The case, band, glass or battery is damaged or worn.
- (5) This warranty certificate is not presented when requesting service.
- (6) The name and address of the authorized distributor or the retailer are not stamped in the warranty certificate.
- (7) The date of purchase, model name and manufacturing number are not entered in the warranty certificate.

- The above warranty applies to regions other than the United States of America.
- United Kingdom — This undertaking is in addition to consumers statutory rights and does not affect those rights in any way.