 
 


Module No. 344

READING THE DISPLAY

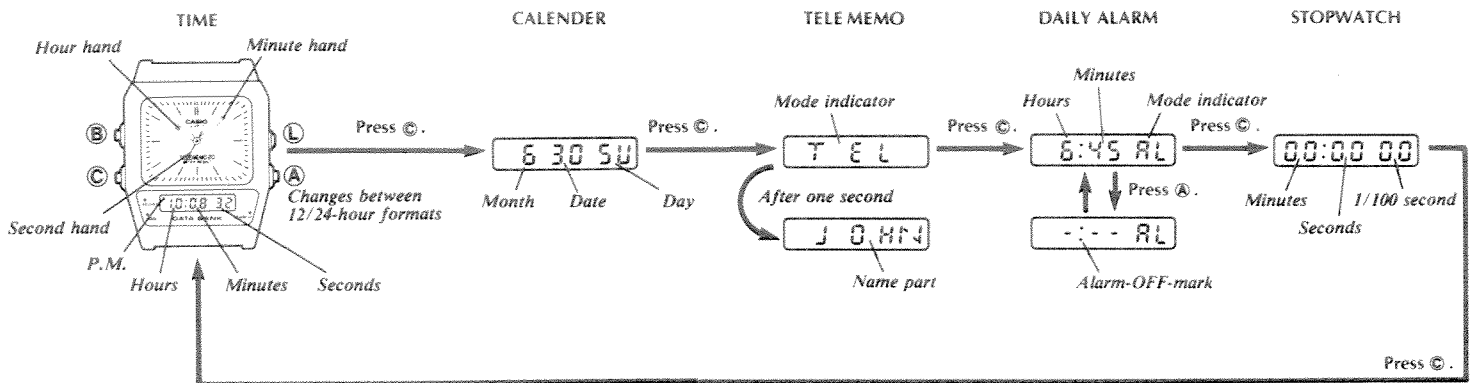

SETTING TIME AND DATE

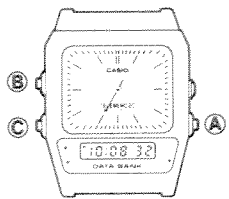

Setting time

- 1) In the TIME display, first press (B) for a few seconds to set.
- 2) Press (A) on a time signal to correct seconds.
- 3) The flashing position can be shifted by pressing (C) in the following order:



- 4) Each press of (A) corrects flashing digits one by one. Keep pressed to move quickly.
- 5) Press (B) to complete setting.

Setting date

- 1) In the DATE display, first press (B) for a few seconds to set.
- 2) The flashing position can be shifted by pressing (C) in the following order:

 


- 3) Each press of (A) corrects flashing digits one by one. Keep pressed to move quickly.
- 4) Press (B) to complete setting.

* Year digits can be set up to the year 2029.


TELEMemo OPERATION

A maximum of 20 sets (pages) of 4 letters and 12 numerals can be stored in memory. Press (A) to search the memory contents. Keep pressed for high speed search. Press (B) to show top 6 numerals of the number part. Press (B) again to show last 6 numerals of the number part. Used pages are automatically stored in alphabetical order.

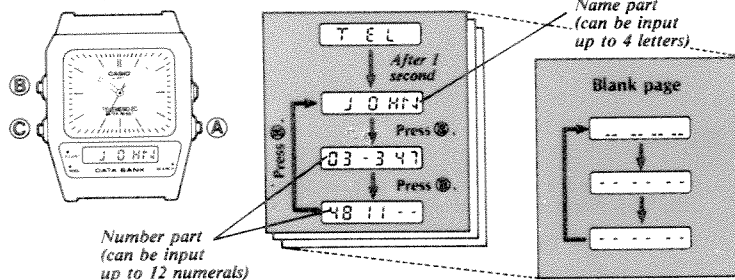


Memorizing new numbers

 - 1) Press (A) in the TELEMemo mode to search a blank page or numbers to be revised.
- 2) Press (B) for a few seconds to set new letters and numerals.
- 3) A letter can be entered at cursor position by pressing (A). The cursor can be shifted by pressing (C). Keep pressed for high speed movement.

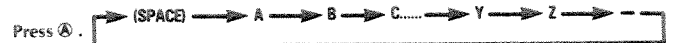

 - 4) A number can be entered at the cursor position by pressing (A). The cursor can be shifted by pressing (C). Keep pressed for high speed movement.

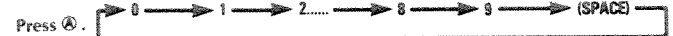

- 5) Press (B) to complete setting.

(Auto-retrieve function)
The display automatically returns to the initial TELEMemo display, if no button is pressed for a few minutes.

* To clear all the contents of a page, press both (A) and (C) simultaneously while storing letters.

(Display demonstration)

Press (A) and (B) simultaneously in TELEMemo display, and it starts demonstration. To stop this demonstration, press any button.

SETTING DAILY ALARM

Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press (A) button to stop beeper. Signal sounds every hour on the hour if time signal is set.

(Sound demonstration) Press and hold (C) in ALARM mode to sound beeper.

(ON or OFF setting of daily alarm) in ALARM display, press (A) to turn ON (preset time appears) or OFF (preset time disappears).

(Setting daily alarm)

- 1) Press (B) for a few seconds in DAILY ALARM to set hour.
- 2) The flashing position can be shifted by pressing (C) in the following order:



- 3) Each press of (A) corrects flashing digits one by one. Keep pressed to move quickly.
- 4) In ON/OFF setting of time signal, press (A) to turn ON (SIG On) or OFF (SIG-).
- 5) Press (B) to complete setting.

(Auto-retrieve function)

 
Display automatically returns to initial DAILY ALARM display if no button is pressed for a few minutes.

SETTING ANALOG TIME

- 1) When the second hand is at 12 o'clock position, stop the second hand by pulling the crown out.
- 2) Set the hands by turning the crown.
- 3) Press the crown in on a time signal.

A gain or loss of one second or less may result from properties of mechanical parts.

STOPWATCH OPERATION

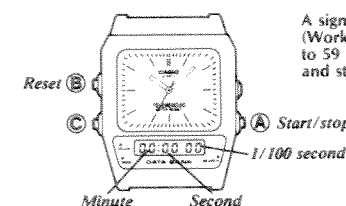

A signal confirms start/stop operation. (Working range) Total elapsed time display is limited to 59 minutes 59.99 seconds. For longer times reset and start again.

