 


Module No. 328/382/383/394/397

TO SET TIME AND DATE

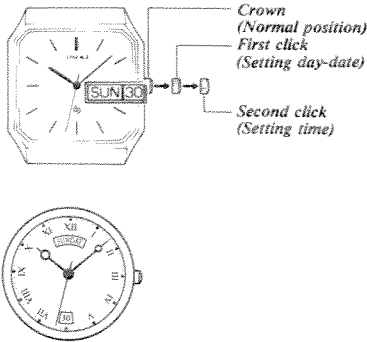

(Module NOS. 383/397)

[Day display]


English	Spanish
SUN	DOM
MON	LUN
TUE	MAR
WED	MIE
THU	JUE
FRI	VIE
SAT	SAB

*Module Nos. 383/397
The day display is only in English.

■ Setting time

- 1) Pull the crown out to the second click when the second hand is at the 12 o'clock position and the second hand stops.
- 2) Turn the hands clockwise and put the watch four or five minutes forward. Then back them out.
- 3) Push the crown in to the normal position on a time signal.

 ■ For watch with the elapsed time bezel
Rotate the elapsed time bezel to align the ∇ mark with the minute hand. After certain amount of time elapsed, read the graduation on the elapsed time bezel which the minute hand points to. The elapsed time is indicated.

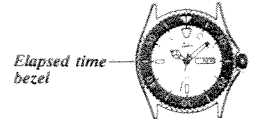


■ Setting day-date

- 1) Pull the crown out to the first click.
- 2) Module No. 328/382:
Set the date by turning the crown clockwise.
Set the day by turning the crown counterclockwise.
Check whether the day is English or Spanish.
Avoid setting the day-date between 8:00 p.m. and 1:00 a.m. (the day-date display may not change in the following day).
Module No. 383/394/397:
Set the date by turning the crown counterclockwise.
Set the day by turning the crown clockwise.
Check whether the day is English or Spanish.
Avoid setting the day-date between 5:00 p.m. and 1:00 a.m. (the day-date display may not change in the following day).
- 3) Push the crown in to the normal position.


Module No. 333

 READING THE DISPLAY

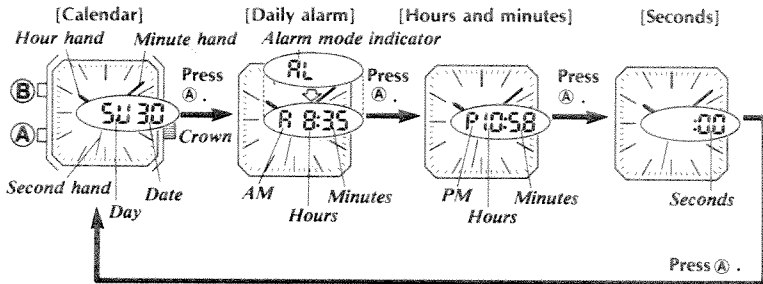


(Sound demonstration) Press and hold the $\text{\textcircled{A}}$ button to sound the beeper.

 SETTING CALENDAR

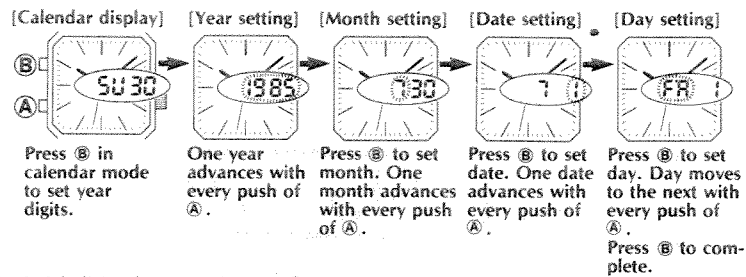

(Quick digit advance) When the $\text{\textcircled{A}}$ button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.
(Auto-retrieve function) When setting the watch, if you leave it alone for 2 to 3 minutes, the display will automatically return to the regular timekeeping mode.

 SETTING DAILY ALARM

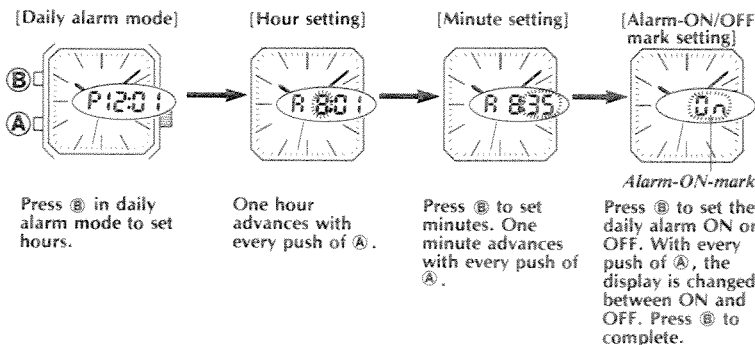

If the daily alarm is set the beeper sounds for 20 seconds at the preset time every day until cleared. To stop the beeper while sounding, press any button.

SETTING HOURS AND MINUTES

- 1) [Hour setting] Press $\text{\textcircled{B}}$ in hours and minutes mode to set hours. One hour advances with every push of $\text{\textcircled{A}}$. Check whether AM (R) or PM (P) is lit.
- 2) [Minute setting] Press $\text{\textcircled{B}}$ to set minutes. One minute advances with every push of $\text{\textcircled{A}}$.
- 3) Press $\text{\textcircled{B}}$ to complete.

SETTING SECONDS

Press $\text{\textcircled{B}}$ in seconds display to correct seconds.
Press $\text{\textcircled{A}}$ on a time signal.
Press $\text{\textcircled{B}}$ to complete.

SETTING ANALOG TIMEKEEPING

- 1) Pull the crown out when the second hand at 12 o'clock position and the second hand stops.
- 2) Set the hands by turning the crown.
- 3) In accordance with a time signal, push the crown in.

A gain or loss of one second or less may result from properties of mechanical parts.