 


Module No. 437/438

READING THE DISPLAY

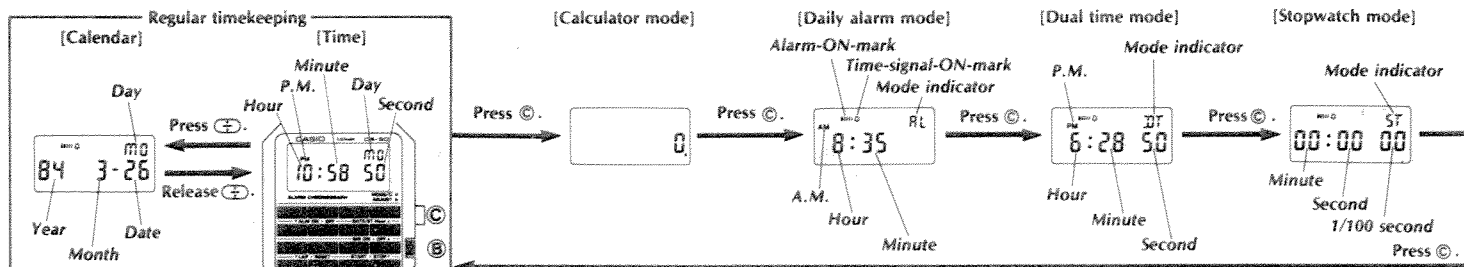 


(Reversion to regular time) The watch reverts to the regular timekeeping display after operating in any mode.

(Auto-retrieve function) The calculator and alarm displays will automatically return to the regular timekeeping display in 5 or 6 minutes.

SETTING TIME AND CALENDAR

- To set time and calendar, press M in the regular timekeeping mode.
- Press the C key on a time signal to correct seconds.
- The flashing position can be shifted by pressing M in the following order:



- AM or PM can be entered by pressing the A button.*
- A numeral can be entered in the flashing position by pressing the required numeral key.
 - Press M to complete setting.
- *While setting time and calendar, with every push of M , the display is switched between 12-hour and 24-hour formats.

CALCULATOR OPERATION

EXAMPLE	OPERATION	READ-OUT	EXAMPLE	OPERATION	READ-OUT
Basic calculation: $(12 - 0.5) \times 3 + 7$ $= 4.9285714...$	$12 \text{ M } 0.5 \text{ M } 3 \text{ M } 7 \text{ M}$	492857.14	$3 \times 4 = 12$ (4 is constant)	$4 \text{ M } 3 \text{ M } \times \text{M}$	12
Constant calculation: $3 + 4 = 7$ (4 is constant)	$4 \text{ M } 3 \text{ M } + \text{M}$	7	$8 \times 4 = 32$	$8 \text{ M } 4 \text{ M } \times \text{M}$	32
$8 + 4 = 12$	$8 \text{ M } 4 \text{ M } + \text{M}$	12	$3 + 4 = 0.75$	$4 \text{ M } 3 \text{ M } \div \text{M}$	0.75
$3 - 4 = -1$	$4 \text{ M } 3 \text{ M } - \text{M}$	-1	$8 + 4 = 2$	$8 \text{ M } 4 \text{ M } + \text{M}$	2
$8 - 4 = 4$	$8 \text{ M } 4 \text{ M } - \text{M}$	4	Power calculation: 3^2	$3 \text{ M } \times \text{M}$	9
			3^3	$3 \text{ M } \times \text{M} \times \text{M}$	27

To save battery power, press the M button in the calculator mode to silence the tone. To retrieve sound, press the M button again.

SETTING DAILY ALARM TIME

 
Every time the A button is pressed in the alarm time mode, the alarm-ON-mark (AL) appears or disappears. When the alarm-ON-mark is lit, the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press any button.

(Setting the time signal) Every time the M button is pressed in the alarm time mode, the time-signal-ON-mark (RL) appears or disappears. When the time-signal-ON-mark is lit, the watch sounds every hour on the hour.

(Sound demonstration) While both M and A buttons are pressed simultaneously, the buzzer sounds.

[Presetting alarm time]


- Press M to set new alarm time.
- Press A to set PM or AM.*
- A numeral can be entered in the flashing position by pressing the required numeral key. The flashing digit can be shifted in the following order:



- Press M to complete setting.
- *When the watch is in the 24-hour system, the alarm time is displayed in that system.


SETTING DUAL TIME

 - Press M to set new time in dual time mode.
- Press A to set PM or AM.*
- A numeral can be entered in the flashing position by pressing the required numeral key. The flashing digit can be shifted in the following order:




- Press M to complete setting.
- *When the watch is in the 24-hour system, the dual time is displayed in that system.

 STOPWATCH OPERATION

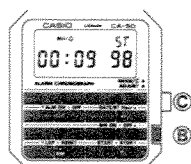

 A signal confirms start/stop operation. The tone sounds at 10-minute intervals. (Working range) The stopwatch display is limited to 23 hours 59 minutes 59.99 seconds. Thereafter it can be reset and started again. The hour digits can be shown by pressing the M button.

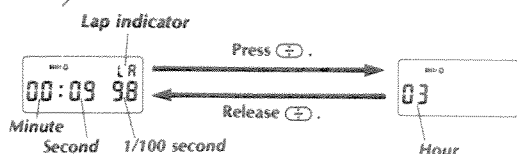

- Net time measurement
 M (Start) \rightarrow M (Stop) \rightarrow M (Re-start) \rightarrow M (Stop) \rightarrow M (Reset)
- Lap time measurement
 M (Start) \rightarrow M (Lap) \rightarrow M (Lap release) \rightarrow M (Stop) \rightarrow M (Reset)
- 1st-2nd place times
 M (Start) \rightarrow M (Lap) The first runner finishes. \rightarrow M (Stop) The second runner finishes. Record the time of the first runner. \rightarrow M (Lap release) Record the time of the second runner. \rightarrow M (Reset)