



Module No. 487/506/526/683


READING THE DISPLAY

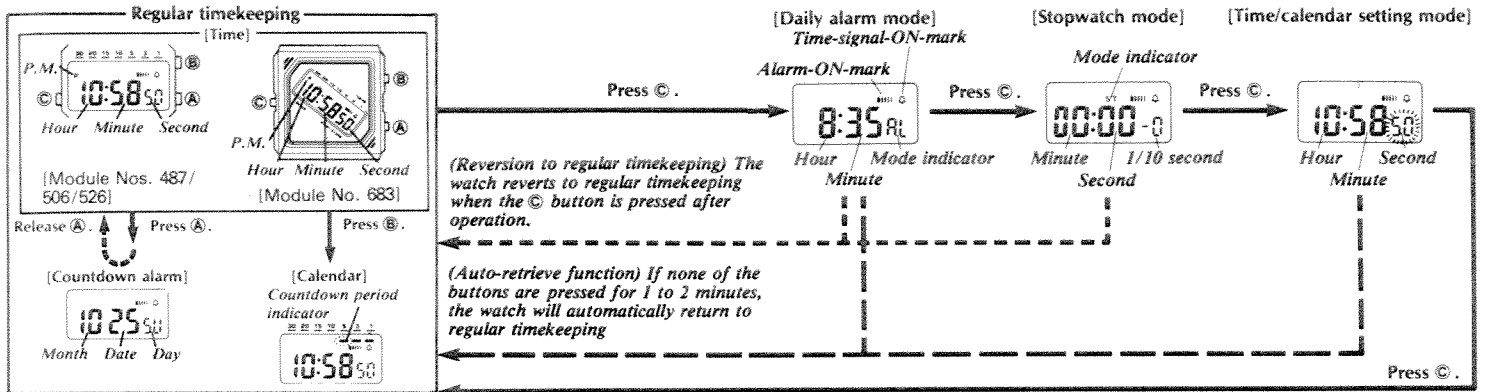


COUNTDOWN ALARM OPERATION

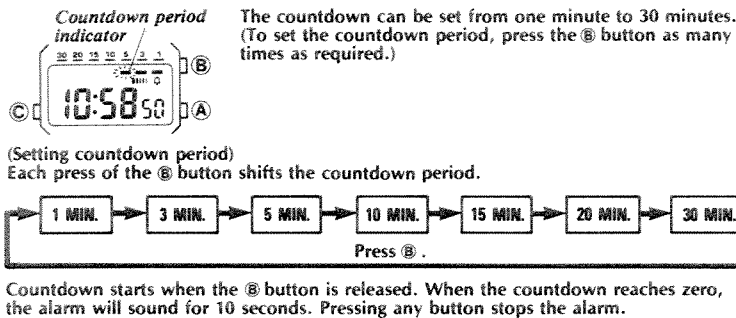


SETTING DAILY ALARM

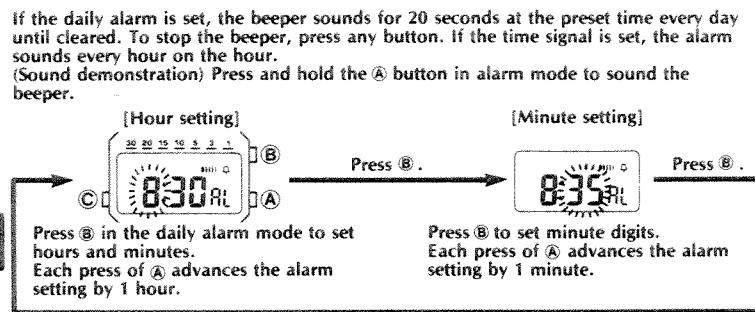

ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL

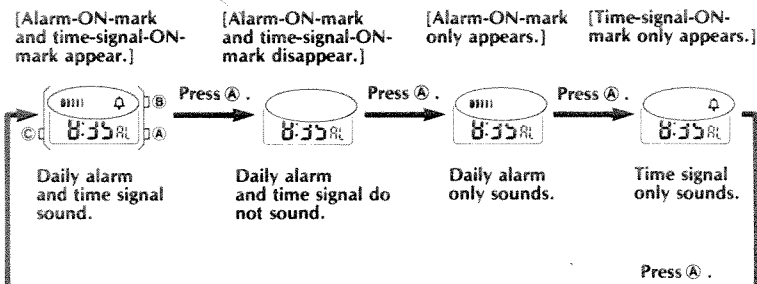

STOPWATCH OPERATION

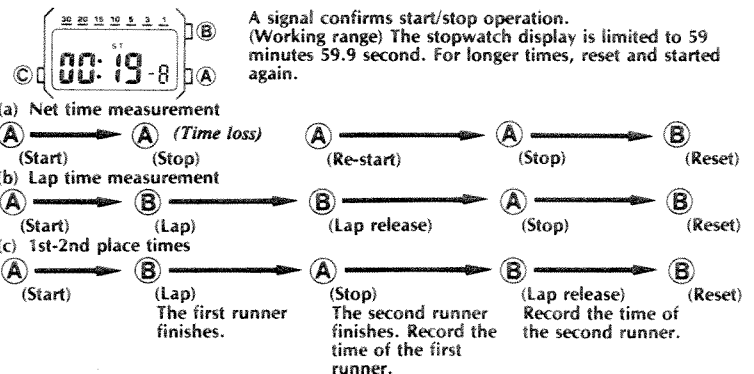

SETTING TIME AND CALENDAR

