 
 


READING THE DISPLAY

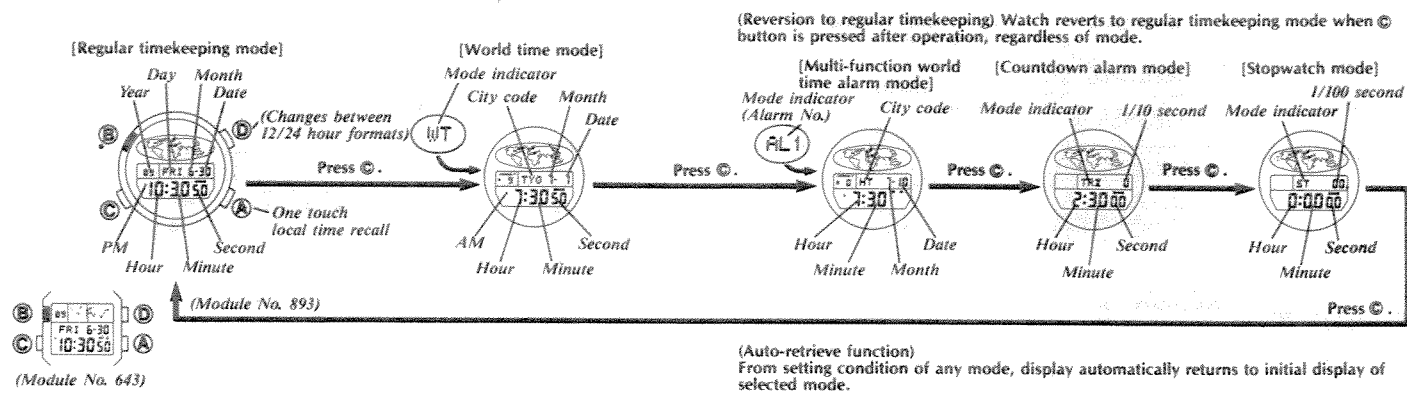 


SETTING REGULAR TIME (home time) AND CALENDAR

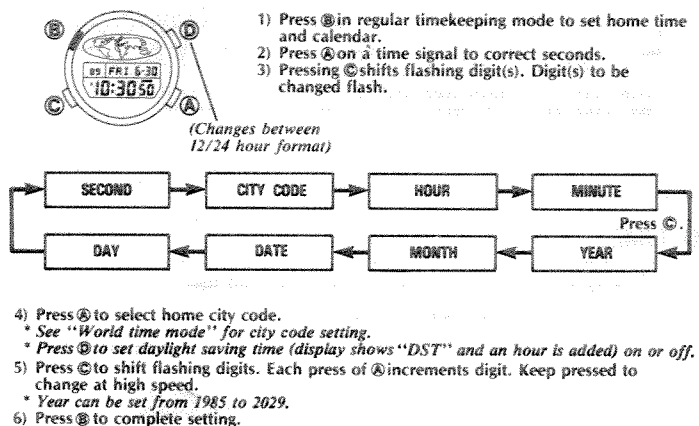


COUNTDOWN ALARM OPERATION


Countdown can be set from 1 minute to 24 hours (display shows 0:00'00"0), and times to an accuracy of 1/10 second. Start/stop operation is possible by pressing **A**, and is confirmed by a signal. When display reaches zero, beeper sounds for 10 seconds until any button is pressed.

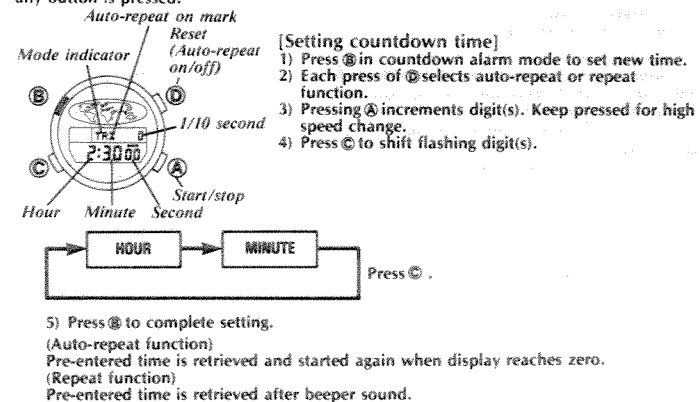


STOPWATCH OPERATION

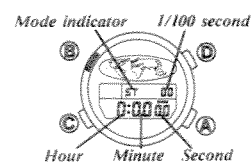

A signal confirms start/stop and split/reset operation. (Working range) Total elapsed time display is limited to 23 hours 59 minutes 59.99 seconds. For longer times reset and start again.

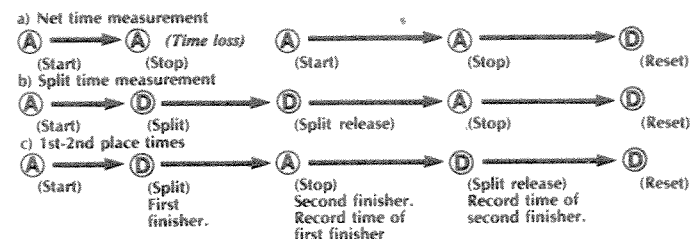

WORLD TIME MODE

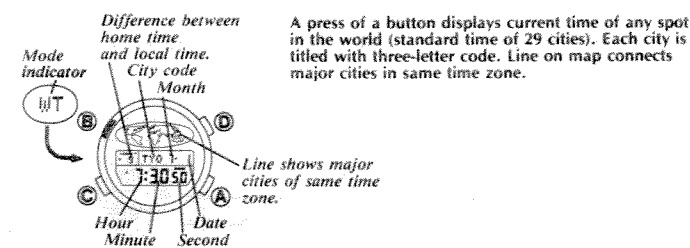

(Searching local time) Press **A** or **C** in world time mode to display each standard time (local time) of 29 cities. Standard time of city displayed last appears first when mode is shifted from regular timekeeping to world time.

(One touch local time recall) Press **A** in regular timekeeping mode to recall local time of city displayed last in world time mode. This function is useful when local time of certain city needs to be checked frequently.

* NOTE

If home time city is replaced with city set for one touch local time recall, the former home time city will be set for one touch local time recall automatically.

Example: If "LON" (London) was set as home time and "TYO" (Tokyo) was set for one touch local time recall, after replacement of home time to "TYO", "LON" will appear on display for one touch local time recall.

(Changing city code) Preset city code can be reset to your desired city code.

Example: Changing "PAR" (Paris) to "ROM" (Rome).

1) Press **A** or **C** in world time mode and search for "PAR".

2) Press **C**. First letter of "PAR" (letter P) starts flashing. Press **C** to shift flashing letter.

3) Press **C** to reset letter. Keep press for quick change.

4) Press **A** to complete.

(Changing to daylight saving time) Daylight saving time can be set for each of 29 cities.

Example: Setting daylight saving time for "NYC" (New York) standard time.

1) Press **A** or **C** in world time mode and search for "NYC".

2) Press **C**. First letter of "NYC" (letter N) starts flashing.

3) Press **C** to set daylight saving time (display shows "DST" and an hour is added) on or off.

4) Press **A** to complete.

* To cancel daylight saving time, operate in same procedure as shown above and switch off "DST" on display.

Difference between GMT	City code	City	Other major city in same time zone
-11	---	---	PAGO PAGO
-10	HNL	HONOLULU	PAPEETE
-09	ANC	ANCHORAGE	NOME
-08	LAX	LOS ANGELES	SAN FRANCISCO, LAS VEGAS, VANCOUVER, SEATTLE, DAWSON CITY
-07	DEN	DENVER	EL PASO, EDMONTON
-06	CHI	CHICAGO	HOUSTON, DALLAS, NEW ORLEANS, MEXICO CITY, WINNIPEG
-05	NYC	NEW YORK	MONTREAL, DETROIT, MIAMI, BOSTON, PANAMA CITY, HAVANA, LIMA, BOGOTA
-04	CCS	CARACAS	LA PAZ, SANTIAGO, PORT OF SPAIN
-03	RIO	RIO DE JANEIRO	SAO PAULO, BUENOS AIRES, BRASILIA, MONTEVIDEO
-02	---	---	---
-01	---	---	AZORES, PRAIA
+00	LON	LONDON	DUBLIN, LISBON, CASABLANCA, DAKAR, ABIDJAN
+01	PAR	PARIS	MILAN, ROME, MADRID, AMSTERDAM, FRANKFURT, HAMBURG, VIENNA, STOCKHOLM, ALGIERS, BERLIN
+02	CAI	CAIRO	ATHENS, HELSINKI, ISTANBUL, BEIRUT, DAMASCUS, CAPE TOWN
+03	MOW	MOSCOW	KUWAIT, RIYADH, JEDDAH, ADEN, BAGHDAD, ADDIS ABABA, NAIROBI
+3.5	THR	TEHERAN	SHIRAZ
+04	DXB	DUBAI	ABU DHABI, MUSCAT
+4.5	KBL	KABUL	---
+05	KHI	KARACHI	ASHKABAD
+5.5	DEL	DELHI	BOMBAY, CALCUTTA, COLOMBO
+06	DAC	DHAKA	TASHKENT, ALMA-ATA
+6.5	RGN	YANGON	---
+07	BKK	BANGKOK	JAKARTA, PHNOM-PENH, HANOI, VIENTIANE, NOVOSIBIRSK
+08	HKG	HONG KONG	SINGAPORE, KUALA LUMPUR, BEIJING, TAIPEI, MANILA, PERTH, ULAN BATOR, IRKUTSK
+09	TYO	TOKYO	SEOUL, PYONGYANG
+9.5	ADL	ADELAIDE	DARWIN
+10	SYD	SYDNEY	MELBOURNE, GUAM, RABAU, KHABAROVSK
+11	NOU	NOUMEA	PORT VILA
+12	WLG	WELLINGTON	CHRISTCHURCH SUVA, NAURU ISLAND