


# Module No. 502/669


## READING THE DISPLAY

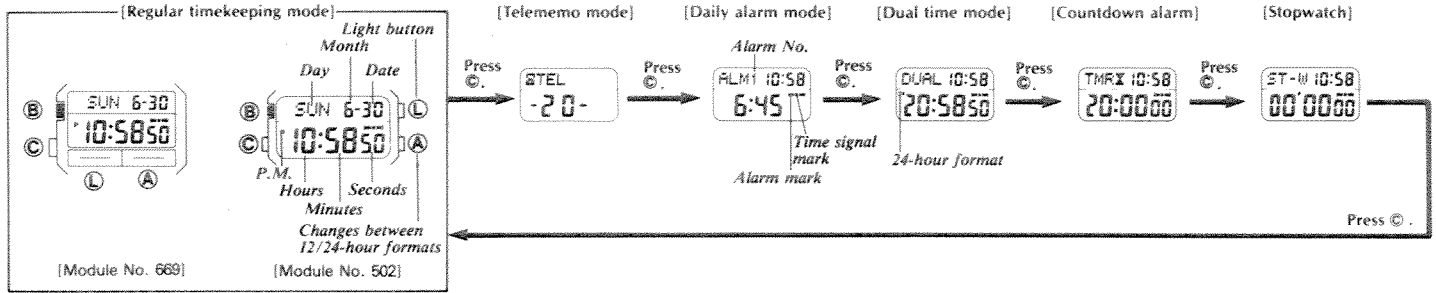


(Reversion to regular timekeeping) The watch reverts to the regular timekeeping mode when the C button is pressed after operation, regardless of the mode.

(Auto-retrieve function) The watch, if left unused, will automatically return to the time display in 2 or 3 minutes.

## SETTING TIME AND CALENDAR

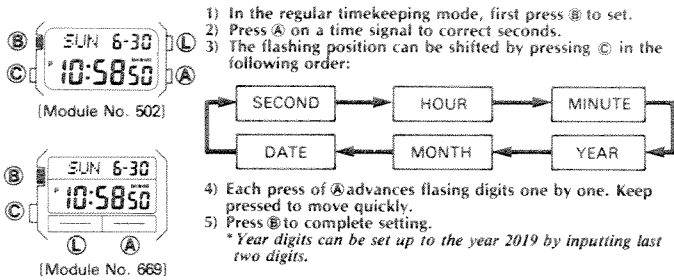


## PRESETTING DUAL TIME

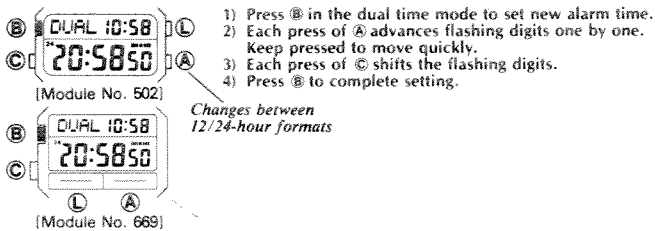

## TELEMEMO OPERATION

20 sets (pages) of 4 letters and 12 numerals can be memorized. Press A or L to search the memory contents. Keep pressed to search quickly. Used pages are automatically stored in alphabetical order.

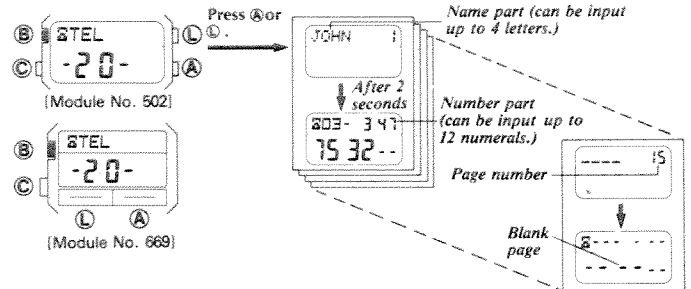

### [Memorizing new numbers]


- 1) Press A or L in the tele-memo mode to search a blank page or number to be revised.
- 2) Press B to set new letters and numerals.
- 3) A letter can be entered at the cursor position by pressing A or L. The cursor can be shifted by pressing C.
- 4) A number can be entered at the cursor position by pressing B or L. The cursor can be shifted by pressing C. Keep pressed to move quickly.
- 5) Press B to complete setting.  
 \* To clear all the contents of a page, press both A and L simultaneously.

## SETTING DAILY ALARM

Three alarm times can be set independently. If the daily alarm is set the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press any button. If the time signal is set, the watch sounds every hour on the hour.

(Sound demonstration) Press and hold A in each alarm mode to sound the buzzer.

### [Presetting alarm times]

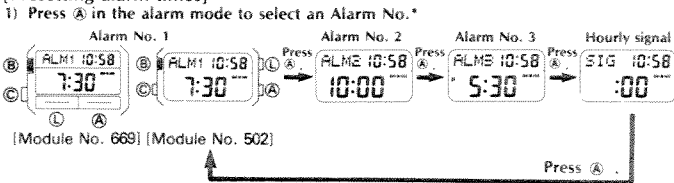


- 2) Press B to set new alarm time.
- 3) Each press of A advances flashing digits one by one. Keep pressed to move quickly.
- 4) Each press of C shifts the flashing digits.
- 5) Press B to complete setting.

\* (Setting hourly time signal) In SIGNAL mode, every time L is pressed, the hourly-time-signal mark (■) appears or disappears. When the hourly-time-signal mark (■) is lit, the watch chimes every hour on the hour.  
 \* (ON or OFF setting of daily alarm) In each alarm mode, every time L is pressed, the alarm mark (■) appears to indicate ON or disappears.

## COUNTDOWN ALARM OPERATION

The countdown can be set from 1 minute to 24 hours (Display shows 0:00) and times to an accuracy of one second. Start/stop operation is possible by pressing the A button and is confirmed by a signal. When the display reaches zero, the buzzer will sound for 10 seconds unless any button is pressed.

### Activates auto-repeat function

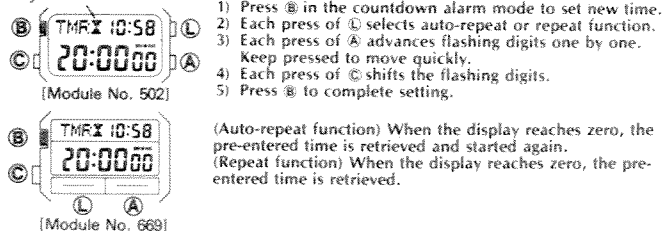

## STOPWATCH OPERATION

