



Module No. 808/809/827/917/927

READING THE DISPLAY

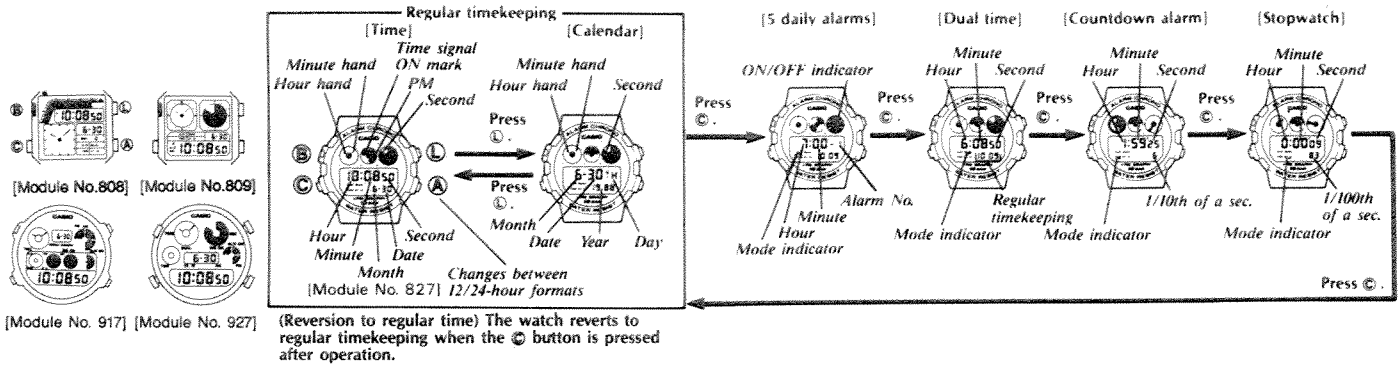


SETTING TIME AND CALENDAR

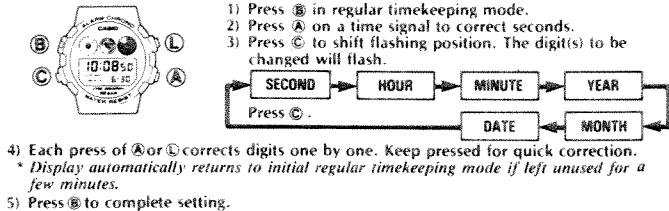


SETTING DUAL TIME

- 1) Press **B** in the dual time mode.
 - 2) Each press of **A** or **L** corrects flashing digits one by one. Keep pressed for quick correction.
 - 3) Press **C** to shift flashing position. The digit(s) to be changed will flash.
* Display automatically returns to initial dual time mode if left unused for a few minutes.
 - 4) Press **B** to complete setting.
- * The **B** button changes 12-/24-hour formats.

FIVE DAILY ALARMS

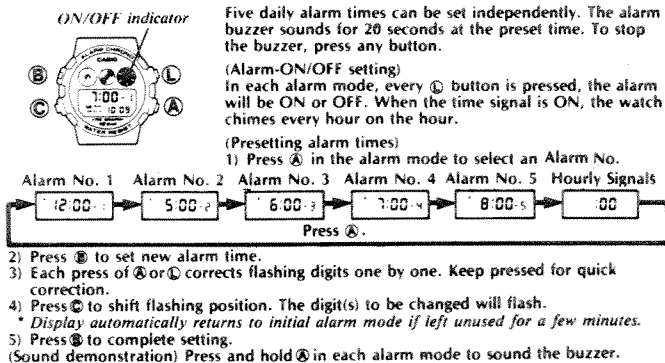

STOPWATCH OPERATION

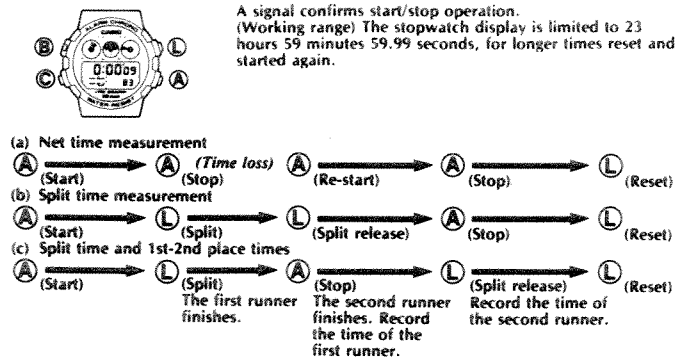

COUNTDOWN ALARM OPERATION

The countdown can be set from one minute to 24 hours (Display shows 0:00), and times to an accuracy of 1/10th of a second.
Start/stop operation is possible by pressing the **A** button and is confirmed by a signal. When the display reaches zero, the buzzer will sound for 10 seconds unless any button is pressed.

