 
 


Module No. 862/932

READING THE DISPLAY

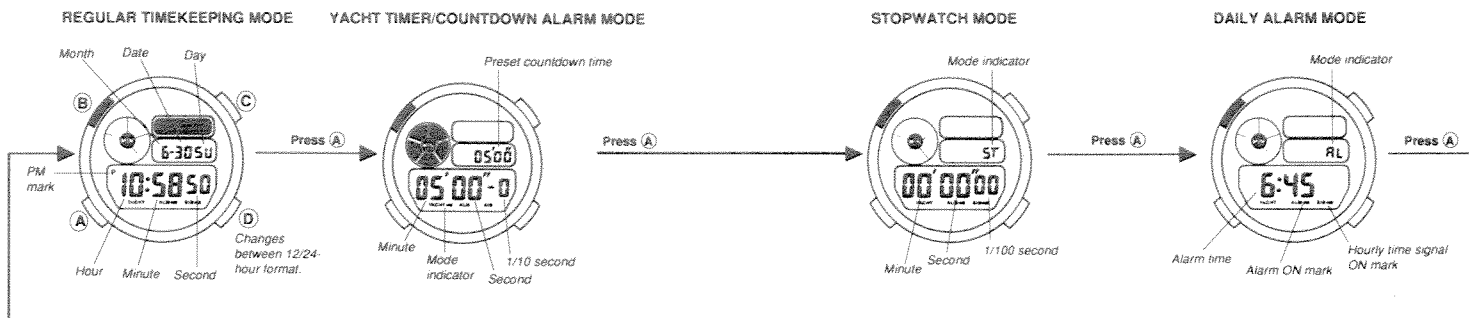

SETTING TIME AND DATE

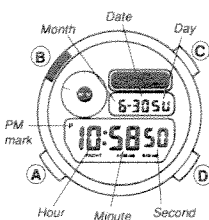

 
- 1) Press (B) in the REGULAR TIMEKEEPING MODE to set correct time.
- 2) Press (D) referring to a time tone to correct seconds.
- 3) Press (A) to shift flashing digit(s). Digit(s) to be changed will flash.



- 4) Each press of (D) increases the digit one by one. Hold down for rapid advance.
- 5) Press (B) to complete setting.

Display automatically returns to the time display if left unused for a few minutes.

USING YACHT TIMER/COUNTDOWN ALARM

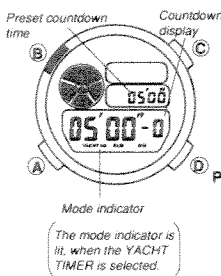

This function combines a Yacht timer and a Countdown alarm. **YACHT TIMER** is preset to 5 minutes. **COUNTDOWN ALARM** is settable from 1 minute to 60 minutes.

USING THE TIMER

- 1) Press (B) in the YACHT TIMER/COUNTDOWN ALARM MODE to switch between timers.



- 2) If the COUNTDOWN ALARM is selected, the measuring time should be set by pressing (C).
- 3) Press (D) to start/stop.
- 4) Press (C) to reset to the measuring time while the timer is not running.

A signal confirms start/stop and reset operation.

 
Module No. 932

The Yacht Timer and Countdown Alarm take 8 measurements from when they are started until they are stopped by pressing the (D) button. These functions stop automatically after 8 measurements.

When display reaches 0, a beeper sounds for 10 seconds. Pressing any button stops the beeper. Timer automatically repeats the countdown.

In the Yacht timer, an advance warning beeper indicates elapsed time (4,3,2,1 minutes, 50, 40, 30, 20 seconds to start). When the countdown reaches 10 seconds before starting time, a beeper sounds every second.

USING STOPWATCH

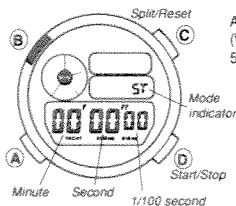

A signal confirms start/stop and split/reset operation. (Working range) Total elapsed time display is limited to 59 minutes 59.99 seconds. For longer times reset and started again.

 
a) Net time measurement




b) Split time measurement



c) 1st-2nd place times

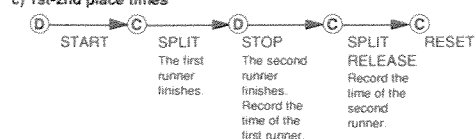

USING DAILY ALARM

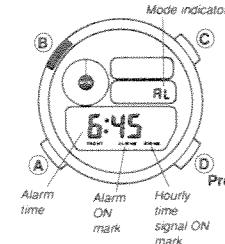 

Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press any button to stop beeper. Signal sounds every hour on the hour if time signal is set.

Setting daily alarm

- 1) Press (B) in the DAILY ALARM MODE to set a new alarm time.
- 2) Press (A) to shift flashing digit(s). Digit(s) to be changed will flash.



- 3) Each press of (D) increases the digit. Hold down for rapid advance.
- 4) Press (B) to complete setting.

Display automatically returns to initial daily alarm time if left unused for a few minutes.

On or off setting of alarm and time signal

