


OPERATION CHART: MODULE QW-1093

READING THE DISPLAY

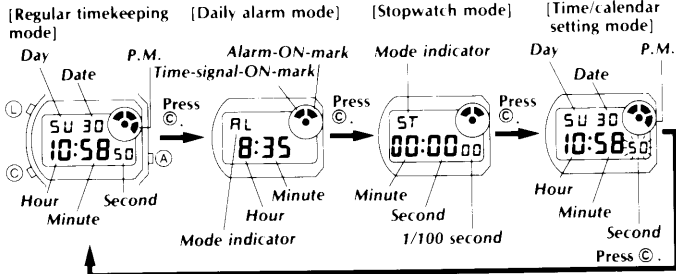


SU: Sunday MO: Monday TU: Tuesday WE: Wednesday TH: Thursday FR: Friday
 SA: Saturday
 (Changeover between 12-hour and 24-hour formats) In regular timekeeping mode, with every push of **A**, the display is switched between 12-hour and 24-hour formats.

STOPWATCH OPERATION




A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 59 minutes 59.99 seconds, for longer times reset and started again.

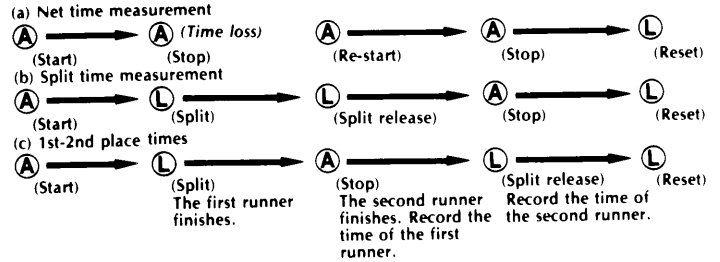

SETTING DAILY ALARM

If the daily alarm is set, the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer, press the **L** button. If the time signal is set, the watch sounds every hour on the hour. (Sound demonstration) Press and hold the **A** button in alarm mode to sound the buzzer.

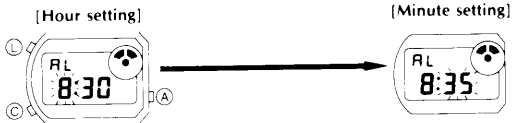


Press **L** in the daily alarm mode to set hour. One hour advances with every push of **A**.

Press **L** to set minute digits. One minute advances with every push of **A**. Press **L** to complete.*

*If the **C** button is pressed, the watch reverts to the regular timekeeping mode. (Quick digit advance) When the **A** button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

[ON or OFF setting of daily alarm and time signal]


[The alarm-ON-mark and time-signal-ON-mark appear.] [The alarm-ON-mark and time-signal-ON-mark disappear.] [The alarm-ON-mark only appears.] [The time-signal-ON-mark only appears.]

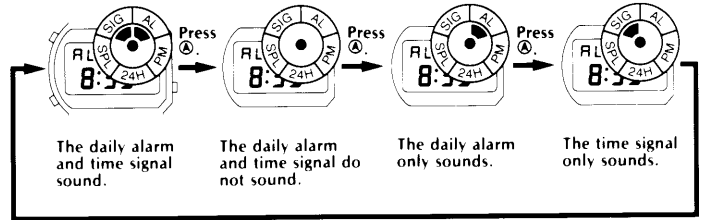

Press **A**.

SETTING TIME AND CALENDAR

IMPORTANT: Setting sequence MUST BE FOLLOWED when making any new setting.

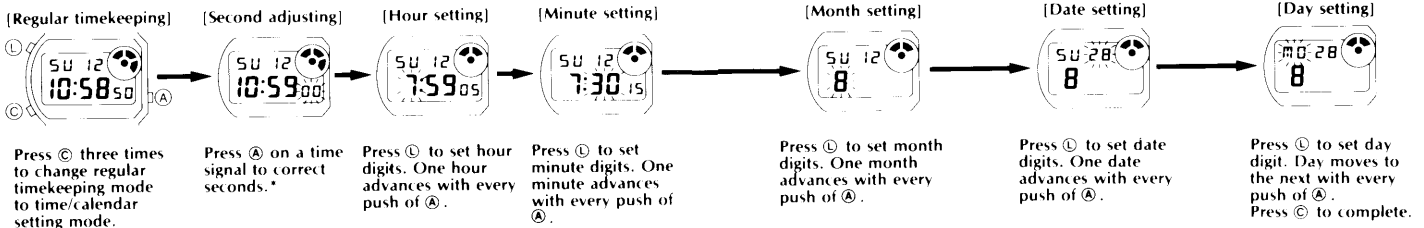

*Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc. (Quick digit advance) When the **A** button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the **L** button repeatedly. (Auto-retrieve function) Any setting display will automatically return to the regular timekeeping mode in 1 or 2 minutes.