



TISSOT TWOTIMER SETTING INSTRUCTIONS

The Twotimer is available in many different styles, in both round and rectangular cases but the setting instructions are identical for all.

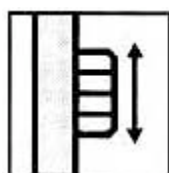


Position A

Neutral position
Neutrale Stellung
Position neutre
Posizione neutra

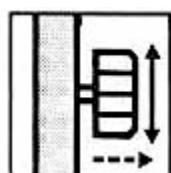

Position B

Crown pulled out
Gezogene Krone
Couronne tirée
Corona estratta

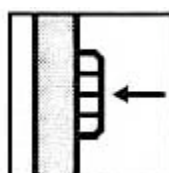

Position A1

Depressed crown
Eingedrückte Krone
Couronne enfoncée
Corona premuta

The seven functions of the digital display:

Line 1.1	10.08 00	Digital time (T1)
Line 1.2	00 07	Seconds and date (T1)
Line 1.3	SA 07	Weekday and date (T1)
Line 2	0.00 00	Timer (TM)
Line 3	11.08 00	Alternate time zone (T2)
Line 4	00 00 00	Chronograph (CH)
Line 5	7.00 RL	Alarm (AL)

Analog Display

Dial and hands indicate local time.

Local time is indicated in the dial's digital display. (Not on the watch above).

The Various Functions of The Digital Display

As well as local time, you may select six additional functions whilst the crown is in position A (see diagram above). The selected function is indicated by a flashing line at the base of the digital display. The marker line which appears in the digital display without flashing, indicates the function currently in use.

All Functions Are Crown Selected.

Pushing or pulling the crown selects one of three positions (see diagram above).

Neutral Position (position A)

In this position, the various functions are selected by turning the crown clockwise or counter-clockwise.

Crown Pulled Out (Position B)

This position permits corrections or settings to be made by turning the crown clockwise or counter-clockwise.

Crown in Depressed Position (Position A1)

In this position, the alarm is turned on or off, the chronograph is operated, the 12 or 24 hour time indication is selected or the alarm tested.

SETTING THE VARIOUS FUNCTIONS

1. Synchronising Analog and Digital Time

- Turn the crown when in position A to put the digital display into neutral (display turned off).
- Pull the crown to position B (digital display turned on).
- Turn the crown in either direction until analog and digital time are synchronised.
- Push the crown back to position A.

2. Setting Exact Time (T1)

- Select digital display T1 (line 1.1 flashes) by turning the crown when in position A.
- Pull crown out to position B and the hours and minutes flash.
- Set local time by turning the crown when in position B. Analog and digital times are set simultaneously.

- Push the crown back into position A. The seconds display will continue flashing for another minute to permit synchronisation of the watch with a time signal.
- At the time signal, press the crown briefly to position A1 (fully depressed) and the seconds will set to 00.

3. Date Correction (T1)

- Select seconds and date display by turning the crown when in position A. Line 1.2 will flash, seconds are displayed to the left and the date to the right.
- Pull the crown to position B. The seconds display will disappear and the month will be displayed in the centre (month and date will be flashing).
- Adjust month and date by turning the crown when in position B. A fast turn adjusts the months, a slow turn adjusts the date.
- Push the crown back to position A.

4. Weekday Correction (T1)

- Select the day and date display (T1) by turning the crown when in position A. Line 1.3 will flash, the weekdays will appear to the left, and the date to the right.
- Pull the crown into position B. The weekday display will flash and a letter will appear in place of the date. This indicates the language used in the weekday display. E for English, F for French and S for Spanish.
- Turn the crown when in position B to set the desired language and day.
- Push the crown back to position A.

5. Using the Timer

- Turn the crown when in position A to select the timer function (TM), line 2 will be flashing.
- Pull the crown into position B which will cause zero markings for hour and minutes to flash.
- Set the desired timing interval by turning the crown whilst in position B. Fast turn sets the hours, slow turn sets the minutes.
- Push the crown back to position A and the countdown commences. When the display counts down to 00.00, the alarm will sound.
- To stop the alarm, push the crown into position A1. You may do this regardless of the setting of the digital display.

6. Interrupting the Timer (TM) and Re-setting it to Zero

- Select the timer function (TM) by turning the crown when in position A and line 2 will flash.

- Push the crown to position A1 for about 2 seconds. The countdown will be interrupted and the timer will re-set to zero.

7. Setting the Second Time Zone (T2)

- Select function T2 by turning the crown whilst in position A and line 3 will flash.
- Pull the crown out to position B and the hour display will flash.
- Turn the crown whilst in position B until the desired hour is reached.
- Push the crown back to position A.

8. Using the Chronograph (CH)

- Select function CH by turning the crown whilst in position A and line 4 will flash.
- Push the crown to position A1 at the desired moment and the time count will begin.
- Push the crown back to position A1 and timing stops.
- Push the crown to position A1 again and the time count will continue.
- When timing is stopped after more than one hour of elapsed time, the minutes, seconds and 1/100th seconds are displayed and then, after an 8 second interval, the hours are displayed.
- Push the crown to position A1 and hold for at least 3 seconds to re-set the chronograph to zero.

9. Using the Alarm (AL)

- Select function AL by turning the crown in position A and line 5 will flash.
- Pull the crown to position B and the hour and minutes will flash.
- Turn the crown whilst in position B until the desired time is indicated. A fast turn sets the hours and a slow turn sets the minutes.
- Push the crown back to position A. The letters AL will appear next to the time programmed, indicating that the alarm is set.
- Push the crown to position A1 to stop the alarm sounding. This may be done regardless of the setting of the digital display.

10. Selecting and Cancelling the Alarm Function (AL)

- Select function AL by turning the crown whilst in position A and line 5 will flash.
- Push the crown to position A1. If the letters AL appear, the alarm is primed. If the letters OF appear, the alarm function is cancelled.

11. Testing the Alarm (AL)

- Select function AL by turning the crown whilst in position A and line 5 will flash.
- Push the crown to position A1 for more than 2 seconds and the alarm will sound.
- Check that the alarm ON (AL) or OFF (OF) is selected as required.

12. Selecting the Time Zone (Winter or Summer Time)

- Select digital display T1 by turning the crown whilst in position A and line 1.1 will flash.
- Pull the crown to position B and the hours and minutes will flash.
- By giving the crown a fast turn, the time is adjusted in hourly increments. Analog and digital times are adjusted simultaneously.
- **Important:** Shifts in minutes are corrected automatically during this procedure. **Never** make adjustments using the crown after turning it quickly.
- Push the crown back into position A.

13. Changing From 24 Hr to 12 Hr Display and Back Again

- Select function T2 by turning the crown whilst in position A and line 3 will flash.
- Push the crown to position A1 once, and the letters A or P will appear, indicating that all digital time displays are on 12-hour mode. If no letter appears, the digital display is in the 24-hour mode.
- Push the crown to position A1 twice and the operating mode changes from 24 hours to 12 hours or vice-versa. During the PM part of the day, a lower case P will appear on the 12-hour digital display.