

### BATTERY CHANGING

The battery in your MICROMA timepiece should be changed if the display dims or fails to appear. A weak battery left in your timepiece for an extended period of time may damage the electronic module.

We recommend that your timepiece be brought to your local jeweler for battery change.

*↓ is pry point.  
Caseback does not screw off.*


### NOTE

Incorrect battery size can damage the electronic module. An incorrectly rated battery (such as hearing aid batteries) can cause leakage which can damage the module.

### RECOMMENDED BATTERY

UC 389, Renata 17, RW 49, Varta 534

*Renata #390*

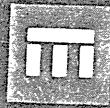

MICROMA®  
SWISS

EIGHT DIGIT LCD MUSICAL ALARM



## MICROMA LIMITED WARRANTY

MICROMA warrants that each watch is free from original defects in workmanship and material for one (1) year from date of purchase.

This warranty does not cover the battery, external crystal, case, strap or bracelet and does not apply if the watch has been abused, mistreated or if damage results from repairs or battery replacement by unauthorized persons.

If any return to MICROMA is necessary within the warranty period, a charge of \$3.95 must accompany shipment. If the watch is returned during the warranty period, MICROMA will repair or replace any defective component and on all returns will replace battery, adjust frequency and provide return postage and insurance.

At the time of purchase, the warranty must be validated with dealer's signature and date of purchase. The registration form must then be filed with MICROMA within 15 days of purchase, otherwise, customer warranty is void.

### TO RETURN YOUR MICROMA WATCH FOR SERVICE

Carefully pack your MICROMA watch in a sturdy box. (DO NOT send back in gift box because same will not be returned.)


SEND TO: MICROMA  
SWISS WATCH TECHNICAL CENTER, INC.  
660 Furnace Hills Pike  
Lititz, Pennsylvania 17543

MICROMA  
SWISS WATCH TECHNICAL CENTER, INC.  
2501 East 28 Street, Suite 110  
Signal Hill, Long Beach, California 90806

Enclose \$3.95 with each watch to cover postage and handling cost.

A MICROMA watch returned after one (1) year will be serviced at a reasonable cost for labor.

## WATCH OPERATING INSTRUCTIONS

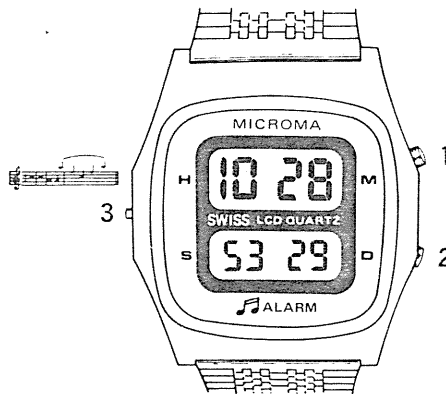


Your "MUSICAL ALARM" shows a permanent display of hour, minute, second and date. The month indication appears only when correcting the display.

Your MICROMA LCD WATCH is programmed to remember the number of days in each month with the exception of February, which is programmed for only 28 days. This means that in a non leap year, no adjustment is necessary. In a leap year, the date requires resetting only once, at the end of February.

### NIGHT READING

Press button ① for super night light.

## WATCH SETTING INSTRUCTIONS

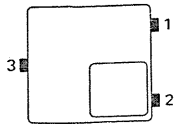


Pressing buttons ① and ② simultaneously prepares the display for correction. The display will appear blank.

### NOTE

The initial display will return automatically after 10 seconds.


If other corrections are required they must be done prior to the display returning to its initial watch function. If not, buttons ① and ② must again be pushed simultaneously to clear the display.

### TO SET THE MONTH

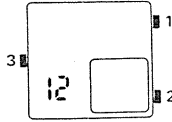


Push buttons ① and ② simultaneously to clear the display, then push button ① once. The month digit will appear in the lower left hand side of the display. Press and hold button ② until the correct month appears. (To return to permanent watch display at this point, press button ① four times).

### TO SET THE DATE

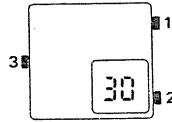


Press button ① twice. The date will appear in the lower right hand side of the display. Press and hold button ② until the correct date appears. (To return to permanent watch display at this point, press button ① three times).

### TO SET HOUR

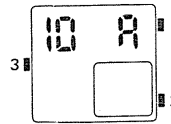


Press button ① three times. The hour digit will appear in the upper left hand side of the display with an "A" or "P", indicating A.M. or P.M. Press and hold button ② until the correct hour digit appears. (To return to permanent watch display at this point, press button ① twice).

### TO SET THE MINUTE

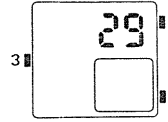

Press button ① four times. The minute digit will appear in the upper right hand side of the display. Press and hold button ② until the correct minute digit appears.


### NOTE

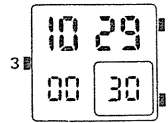


When correcting the minutes, all the digits appear on the display and remain fixed. This automatically resets the seconds to zero.

For exact second setting, set the time to the upcoming minute digit. Use an accurate time source. When your time source and the time shown on your display coincide, press button ①. Your LCD watch will now continue with time calculations and will be perfectly calibrated.

## ALARM OPERATING INSTRUCTIONS

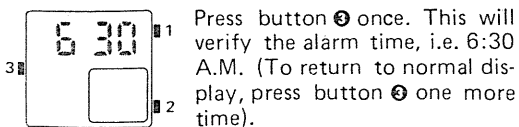

Press button ① once. This will verify the alarm time, i.e. 6:30 A.M. (To return to normal display, press button ② one more time).

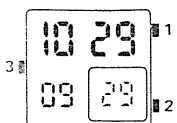


Press button ② once. This activates or deactivates the alarm. The digits will flash on and off to remind you that the alarm is activated. When the alarm is set and you return to normal watch time, the date digit will also flash on and off to remind you that the alarm is set.

At the set time, your "MUSICAL ALARM" will sound its tune. The tune will stop automatically after one minute or instantly if any one of the push buttons are pressed.

To obtain the identical alarm program on the following day, press buttons ② and ③ simultaneously.

When pressing button ③ for more than two seconds, the alarm will sound for as long as the button remains depressed.


## ALARM SETTING INSTRUCTIONS

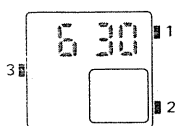

Press button ① once. The hour and minute digits will appear in the top half of the display. If the time shown is correct, press button ② which will set the alarm. The flashing of the digits will indicate that the alarm is set.


If the time displayed is incorrect and the digits are flashing, press button ② to deactivate the alarm, and follow setting instructions below.

## TO SET THE HOUR

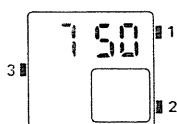


Press buttons ① and ② simultaneously. The hour digit will flash. Press and hold button ② until the correct hour appears.

## NOTE

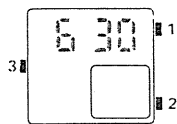


If hour digit appears in the top left hand side, this indicates an A.M. time.

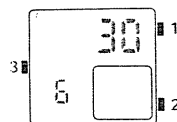

If the hour digit appears in the lower left hand side of the display, this indicates a P.M. setting.

## TO SET THE MINUTE

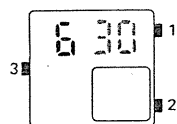

Press button ① one more time, until the minute digit flashes in the upper right hand side of the display, Press and hold button ② until correct minute desired appears. Once desired setting is achieved, press button ① once. The normal watch display will appear and the flashing date digit will indicate the alarm is set.