

Battery: 391, 1.5V

# OPERATION MANUAL FOR LCD ANALOG WITH MELODY ALARM, STOPWATCH AND CHIME.



**1. NORMAL TIME READING**  
Hour, Minute, Second and 3 electronic hands (Hour, Minute and second).  
Press S1 once to show month, date, weekday and 3 electronic hands.  
Press S1 twice return to normal time.

**2. NORMAL TIME SETTING (ELECTRONIC HANDS)**  
Press S2 two seconds, electronic hand's second flashing.  
Press S1 reset to zero.  
Press S2 once hour flashing, advance by S3 (digit's hour simultaneously advance)  
Press S1 for advance minute. (digit's minute simultaneously advance).  
Press S2 return to normal time.  
Press S1 to show month, date, weekday and three electronic hands.  
Press S2 two seconds, month flashing, advance by S1.  
Press S2 date flashing, advance by S1.  
Press S2 weekday flashing, advance by S1.  
Press S2 stop flashed then press S1 once return to normal time.

**3. ALARM SETTING (ELECTRONIC HANDS)**  
Press S3 once to show alarm time mode with alarm indicator. (AL)  
Press S2 hour flashing, advance by S3.  
Press S1 for advance minute.  
Press S2 then press S3 twice return to normal time.  
Alarm On by press S2 once (at normal time mode with Alarm mark )))))).  
Alarm Off by press S2 three times (without alarm mark).  
Melody Alarm stop by press S2 and S4 simultaneously (at normal time).

**4. STOPWATCH SETTING**  
Press S3 twice for stopwatch mode with stopwatch indicator. ( ㊟ )  
Start and stop counting by press S2.  
Press S1 for reset.  
Press S3 return to normal time.

**5. CHIME MODE**  
Press S2 twice, chime On (at normal time mode with chime mark ♪ ).  
Press S2 twice chime Off (without chime mark).

**6. MELODY ALARM TEST**  
Press S3 to alarm time mode then pressing S1 3 seconds for melody alarm test. (AL).  
Stop the melody alarm by press S4.

**7. LAMP**  
S4 is the lamp switch for reading the display in darkness.