

## MICROMA LIMITED WARRANTY

MICROMA warrants that each watch is free from original defects in workmanship and material for one (1) year from date of purchase.

This warranty does not cover the battery, external crystal, case, strap or bracelet and does not apply if the watch has been abused, mistreated or if damage results from repairs or battery replacement by unauthorized persons.

If any return to MICROMA is necessary within the warranty period, a charge of \$3.95 must accompany shipment. If the watch is returned during the warranty period, MICROMA will repair or replace any defective component and on all returns will replace battery, adjust frequency and provide return postage and insurance.

At the time of purchase, the warranty must be validated with dealer's signature and date of purchase. The registration form must then be filed with MICROMA within 15 days of purchase, otherwise, customer warranty is void.

### TO RETURN YOUR MICROMA WATCH FOR SERVICE

Carefully pack your MICROMA watch in a sturdy box. (DO NOT send back in gift box because same will not be returned.)

SEND TO: MICROMA  
SWISS WATCH TECHNICAL CENTER, INC.  
660 Furnace Hills Pike  
Lititz, Pennsylvania 17543

MICROMA  
SWISS WATCH TECHNICAL CENTER, INC.  
2501 East 28 Street, Suite 110  
Signal Hill, Long Beach, California 90806

Enclose \$3.95 with each watch to cover postage and handling cost.

A MICROMA watch returned after one (1) year will be serviced at a reasonable cost for labor.

## BATTERY CHANGING

The battery in your MICROMA timepiece should be changed if the display dims or fails to appear. A weak battery left in your timepiece for an extended period of time may damage the electronic module.

We recommend that your timepiece be brought to your local jeweler for battery change.

## NOTE

Incorrect battery size can damage the electronic module. An incorrectly rated battery (such as hearing aid batteries) can cause leakage which can damage the module.

## RECOMMENDED BATTERY

UC 344, RW 36, RENATA 12, VARTA 529

MICROMA  
SWISS

LCD ANALOG-DIGITAL COMB



downloaded from  
digitalwatchlibrary.com

## WATCH OPERATING INSTRUCTIONS



58 30

SECONDS AND DATE

9.50

HOME TIME I.E:  
SECOND TIME ZONE  
DISPLAY

00:00

CHRONO READY

By pressing button A, the indication of seconds and date changes to the indication of the time (preset to your preference) in another time zone (hours and minutes). By pressing A again, the actual seconds and date return. By pressing button B, the stopwatch is activated and set at 00:00. Two points appear at the center of the display.

00:03

CHRONO STARTED

8:49

CHRONO STOPPED

00:00

CHRONO RESET

9.55

HOME TIME I.E:  
SECOND TIME ZONE  
DISPLAY

29 30

SECONDS AND DATE

Pressing button A starts the counting. The two points flash and the seconds add up on the right of the screen.

The minutes add up on the left until 59 minutes, 59 seconds. Then the minutes pass to the right and the hours appear on the left up to 23 hours, 59 minutes.

By pressing A again, the counting operation is stopped and the two points stop flashing (the counting can resume if needed by pressing A again).

Pressing button B will then reset the stopwatch to 00:00. By pressing B again, you reactivate the previous setting of the display (either seconds and date, or the second time zone).

## WATCH SETTING INSTRUCTIONS

### RESETTING OF HOUR AND MINUTE HANDS



By pulling out the setting crown it is possible to change the position of the hands in either direction. This does not affect the independent functions of the digital display (LCD).

### RESETTING THE MONTH




By pressing A and B simultaneously, the indication of the month flashes on the display. Corrections can be made by pressing A. The display will automatically return to hours and minutes within approximately twelve seconds.

### RESETTING THE DATE




Press A & B simultaneously. Press B again and the date flashes on the right side of the display. To reset the date press A until the correct date appears. The watch is equipped with a days-in-the-month memory. A correction is only necessary in leap years, on February 29th.

### RESETTING THE HOUR OF THE SECOND TIME ZONE

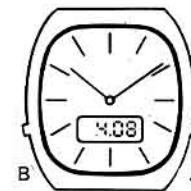


Press A and B simultaneously. Press B twice and the hour flashes on the left side of the display. To reset the hour press A until the correct hour appears.

### RESETTING THE MINUTES OF THE SECOND TIME ZONE

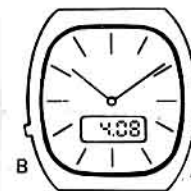

Press A and B simultaneously. Press B three times and the minutes flash on the right side of the display. To reset the minutes press A until the correct minute appears.

### SYNCHRONIZING YOUR WATCH

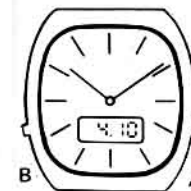

Resetting of the minutes (LCD), internally stops the watch from counting, and resets the seconds to 00:00. The corrected minute flashes on the display. The hour and minute hands can now be set, without affecting the digital display. To synchronize your watch use an accurate time source and press B at the sound of the tone.