


INSTRUCTION MANUAL ML 89-SERIES

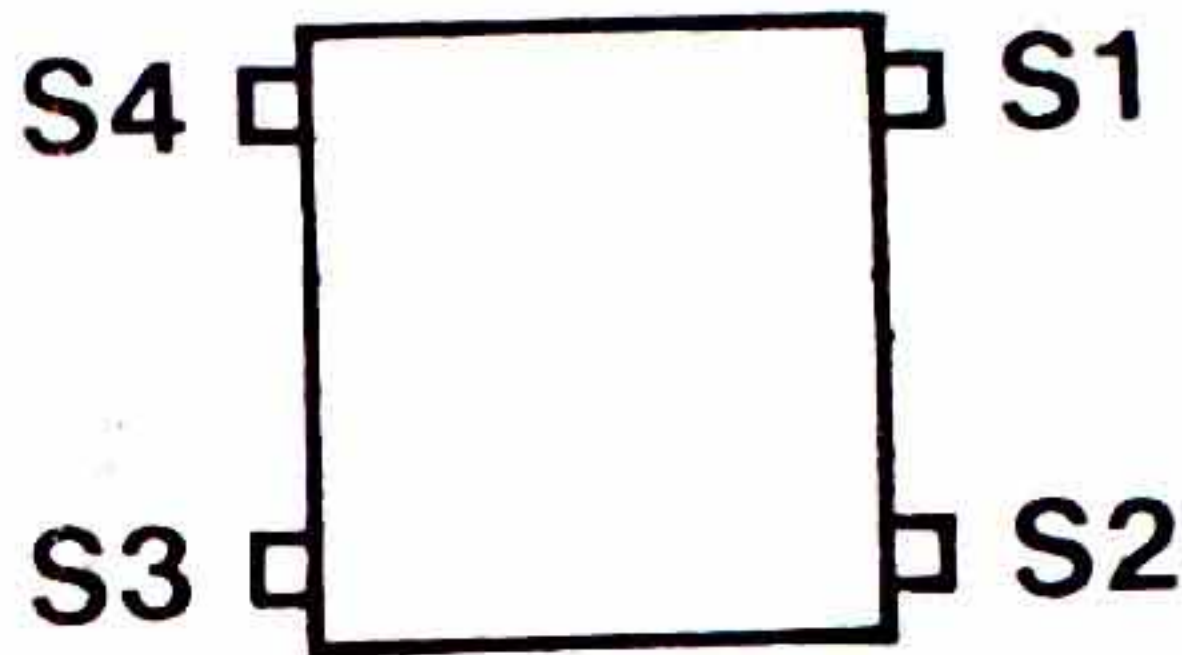

FUNCTIONS:

ANALOG - 3 HANDS, DUAL TIME, ALARM TIME, COUNTDOWN TIMER
DIGITAL - HOUR, MINUTES, SECOND
DATE, DAY OF WEEK
ALARM ON " " AND CHIME ON " "
STOPWATCH.

HOW TO SELECT THE FUNCTION:

DEPRESS S3 - THE SEQUENCE IS DUAL TIME, ALARM TIME,
COUNTDOWN TIMER, STOP WATCH, NORMAL TIME SETTING
AND NORMAL TIME.

DUAL TIME SETTING: SHOW IN ANALOG PART

DEPRESS S1 - ENTER THE SETTING MODE AND
THE SEQUENCE IS HOUR, MINUTE
DEPRESS S2 - ADVANCE THE SETTING AT EACH SETTING MODE.
DEPRESS S1 - RETURN TO DUAL TIME MODE.

ALARM TIME SETTING: SHOW IN ANALOG PART

DEPRESS S1 - ENTER THE SETTING MODE AND
THE SEQUENCE IS HOUR, MINUTE
DEPRESS S2 - ADVANCE THE SETTING AT EACH SETTING MODE
DEPRESS S1 - RETURN TO ALARM TIME MODE.

COUNTDOWN TIMER SETTING: SHOW IN ANALOG PART

DEPRESS S2 - ADVANCE THE MINUTE SETTING AND THE
MAXIMUM SETTING IS "ONE" HOUR.
DEPRESS S1 - START/STOP THE COUNTDOWN TIMER
DEPRESS S2 - CANCEL THE COUNTDOWN TIMER SETTING.

CHRONOGRAPH: SHOW IN DIGITAL PART

DEPRESS S1 - START/STOP THE CHRONOGRAPH
DEPRESS S2 - LAP OR RESET

NORMAL TIME SETTING: BOTH ANALOG AND DIGITAL

DEPRESS S1 - SELECT THE SETTING AND THE SEQUENCE IS
SECOND, MINUTE, HOUR, DATE, MONTH AND
DAY OF WEEK.
DEPRESS S2 - ADVANCE THE SETTING AT EACH SETTING MODE.
DEPRESS S3 - RETURN TO NORMAL TIME.

HOW TO SET ALARM AND CHIME:

DEPRESS S1 - S2 SIMULTANEOUSLY WILL ARM OR
DISARM THE CHIME " " AND THE ALARM " ".

BACK LIGHT AND ALARM STOP:

DEPRESS S4 ONCE

BATTERY REPLACEMENT:

UNION CARBIDE 391
RAY-O-VAC RW 40
HITACHI MAXELL SR 1120W OR EQUIVALENT.