




## [Reading the display]

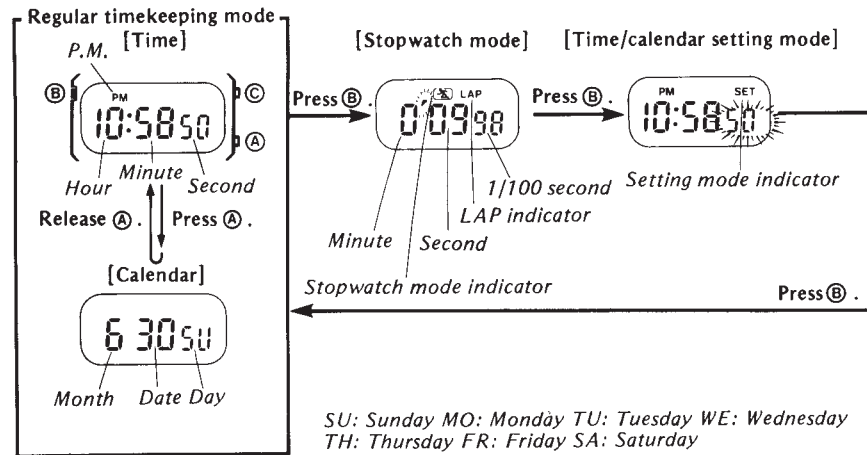

## [Stopwatch operation]

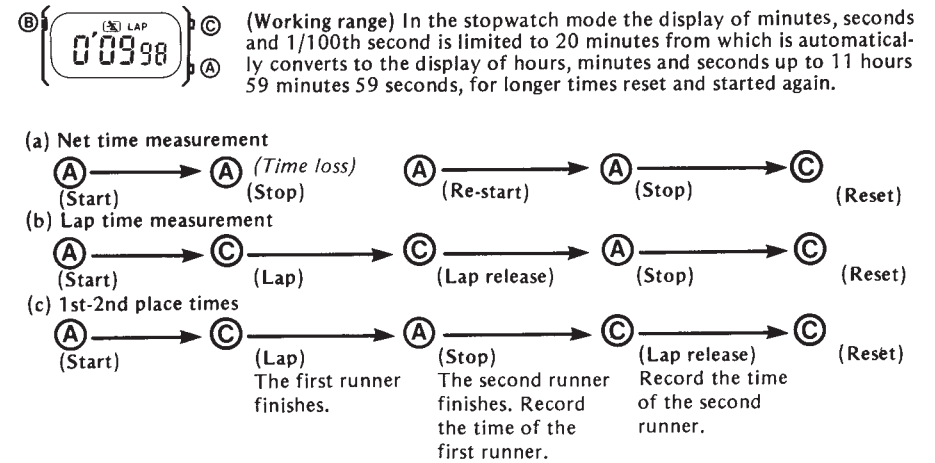

## [Setting time and calendar]

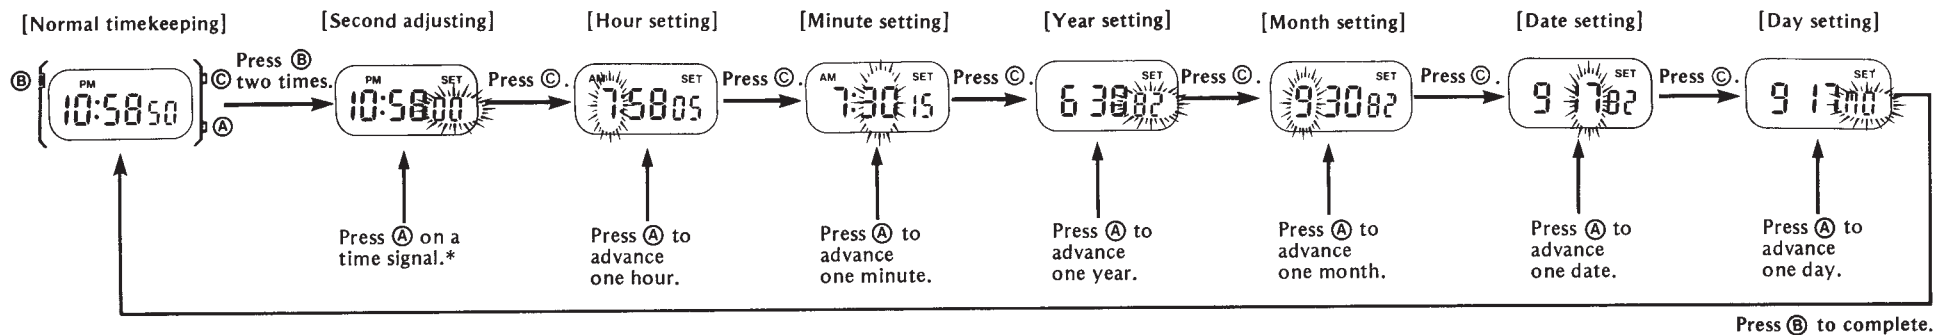

- \* Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc.
- (Quick digit advance) When the (A) button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.
- (Independent correction) Correction of any digit, if not required, can be skipped by pressing the (C) button repeatedly.
- (Reversion to normal timekeeping mode) The watch reverts to the normal timekeeping mode if the (B) button is pressed, regardless of the digit setting mode.
- (Auto-retrieve function) Any setting display will automatically return to the regular timekeeping mode in 1 or 2 minutes.