


SUN: Sunday MON: Monday TUE: Tuesday WED: Wednesday THU: Thursday FRI: Friday SAT: Saturday

(Setting hourly time signal) If the colon flashes when the A button is pressed, it indicates the time signal is set.

When the time signal is set, the watch chimes every hour on the hour.

(Sound demonstration) The chime can be heard with each alternate press of the A button during normal timekeeping.

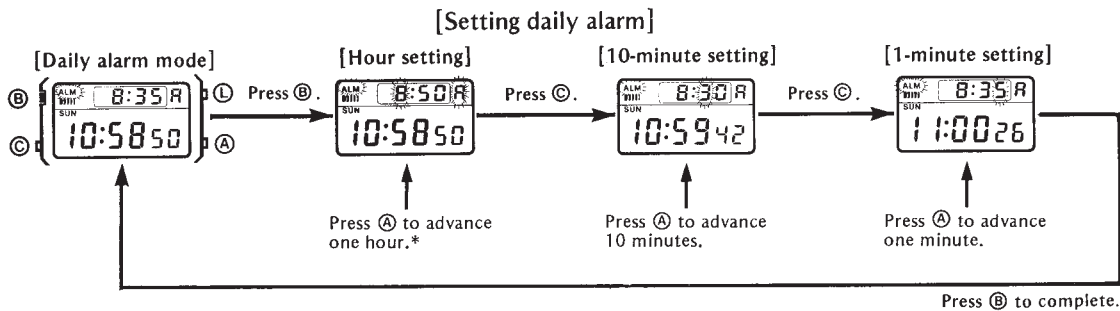

Press A to advance one hour.*

Press A to advance 10 minutes.

Press A to advance one minute.


Press B to complete.

* When the watch is in the 24-hour system, the alarm time is displayed in the 24-hour system.


Every time the A button is pressed in the alarm time mode, the alarm-ON-mark (||||) appears or disappears. When the alarm-ON-mark is lit, the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer, press the L button.

[Stopwatch operation]

A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 11 hours 59 minutes 59.99 seconds. Thereafter it can be reset and started again.

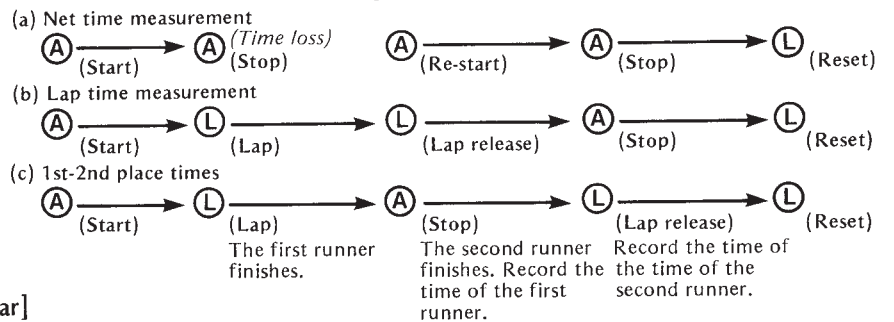

[Setting time and calendar]

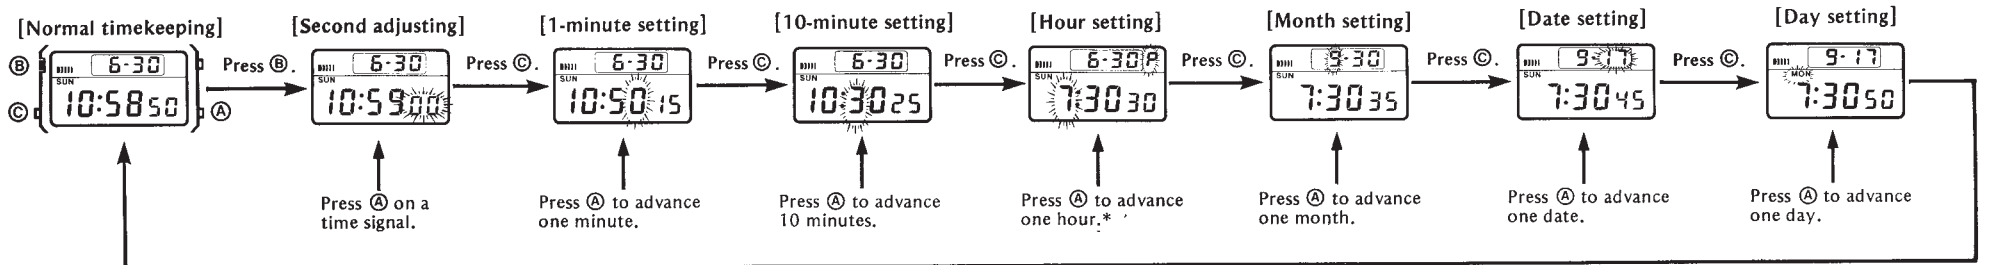

* In hour setting mode, with every push of L the display is switched between 12-hour and 24-hour formats.

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the C button repeatedly.

(Reversion to normal timekeeping mode) The watch reverts to the normal timekeeping mode if the B button is pressed, regardless of the digit setting mode.

(Auto-retrieve function) Any setting display will automatically return to the regular timekeeping mode in 2 or 3 minutes.

Press B to complete.