



# Module No. 387

## READING THE DISPLAY


### REGULAR TIMEKEEPING MODE

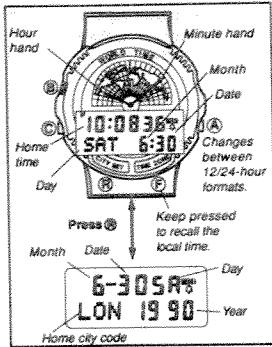

### WORLD TIME MODE

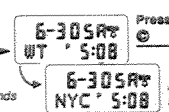


### CITY SELECT MODE

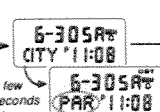


Press (C) for an outline of all functions. Each function is explained on the following pages.


### WORLD TIME ALARM MODE

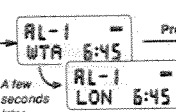

### COUNTDOWN ALARM MODE

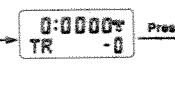


### STOPWATCH MODE

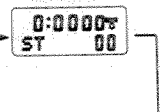


The watch reverts to the REGULAR TIMEKEEPING MODE when (C) button is pressed after operation.

### TIME SETTING MODE

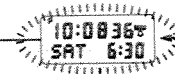

## USING WORLD TIME ALARM

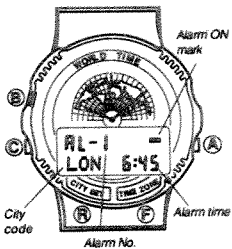

3 daily alarms can be set independently for any city. The beeper sounds for 20 seconds at the preset time until cleared. Press any button to stop beeper. If the hourly time signal is ON, the watch sounds every hour on the hour.

### SETTING ALARM TIME

- 1) Press (C) three times in the REGULAR TIMEKEEPING MODE to shift to the WORLD TIME ALARM MODE.
- 2) Press (C) or (C) in the WORLD TIME ALARM MODE to select the alarm number (AL-1 to AL-3).



- 3) Press (C) to reset the alarm time. Pressing (C) (or (C)) increments (or decrements) digits by one. Hold down for rapid advance.
- 4) Press (C) to shift flashing position. The digit(s) to be changed will flash.



- 5) Press (C) (time zone) or (C) (city code) to select the city when city code is flashing.
  - 6) Press (C) to complete setting.
- \* Display automatically returns to initial daily alarm display if left unused for a few minutes.

### ON/OFF SETTING OF ALARM AND TIME SIGNAL


Press (C) or (C) in the WORLD TIME ALARM MODE to select the alarm number (AL-1 to AL-3) or time signal. Press (A) in each alarm number (AL-1 to AL-3) to set alarm ON ( ) or OFF (no mark). Press (A) in time signal to set time signal ON ( ) or OFF (no mark).

- \* Pressing (A) in alarm mode automatically sets alarm ON.
- \* Alarm time is displayed in the 24-hour system when regular timekeeping is in the 24-hour system.

### SOUND DEMONSTRATION

Press and hold (C) or (C) for a few seconds in the WORLD TIME ALARM MODE to sound beeper.

## USING WORLD TIME FUNCTION

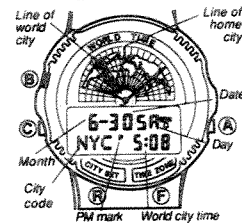

A press of (C) or (C) displays the current standard time in up to 129 cities (100 preset codes and 29 free-set codes\*). Each city is titled with a three-letter code. A line on the map connects major cities in same time zone. \* 29 city codes can be set freely. See "SETTING CITY CODE"

### SEARCHING LOCAL TIME

Press (C) in the WORLD TIME MODE to display each time zone. Next press (C) to display the city code in each time zone. Standard time of the city displayed last appears first when this mode is selected.

### SETTING ANALOG HOME TIME/DIGITAL WORLD TIME OR VICE VERSA.

Analog home time and digital world time or analog world time and digital home time can be set. Pressing (C) in the WORLD TIME MODE to switch the display between these time combinations of time.



### SETTING DAYLIGHT SAVING TIME


Daylight saving time can be set for each of the 129 cities.

- 1) Press (C) or (C) in the WORLD TIME MODE or CITY SELECT MODE to search among cities.
  - 2) Press (A) to set daylight saving time on/off. When the display shows "DST", one hour will be added to the current time of that time zone.
- \* To cancel daylight saving time, press (A) again and "DST" on the display will disappear.

### SETTING CITY CODE


29 city codes can be set for each time zone freely.

- 1) Press (C) twice in the REGULAR TIMEKEEPING MODE to shift to the CITY SELECT MODE.
- 2) Press (C) and the current time digits of the time zone flashes. Press (C) or (C) to select the time zone.
- 3) Press (C) and the first letter flashes. Press (C) to shift the flashing letter.
- 4) Press (C) or (C) to set the letter. Keep pressed for quick advance.

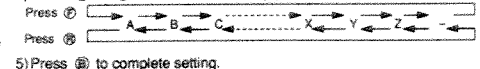

- 5) Press (C) to complete setting.

## USING COUNTDOWN ALARM

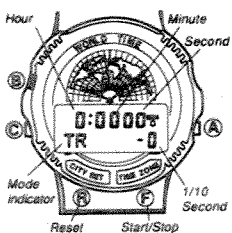

Countdown alarm can be set from 1 second to 24 hours (display shows 0:00 00-0). It times to an accuracy of 1/10th of a second. Press (C) to start/stop operation. Press (C) to reset the measuring time while the timer is not running. A signal confirms the operation. When display reaches 0, a beeper sounds for 10 seconds until any button is pressed.


### SETTING COUNTDOWN TIME

- 1) Press (C) in COUNTDOWN ALARM MODE to set a new time.
  - 2) Press (C) (or (C)) to increment (or decrement) digits. Hold down for rapid advance.
  - 3) Press (C) to shift flashing digits.
  - 4) Press (C) to complete setting.
- \* Display automatically returns to initial countdown alarm display if left unused for a few minutes.

### REPEAT FUNCTION

Pre-entered time is retrieved when display reaches 0.

## USING STOPWATCH

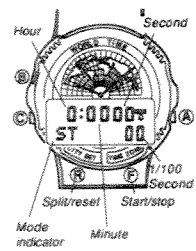

A signal confirms start/stop and split/reset operation. The total elapsed time display is limited to 23 hours 59 minutes 59.99 seconds. For longer measurement reset, then restart the stopwatch.


### a) Net time measurement




### b) Split time measurement




### c) 1st-2nd place times measurement

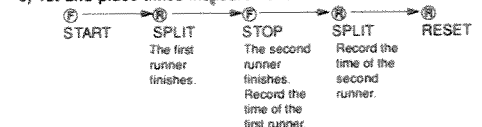

## SETTING REGULAR TIME (home time) AND DATE

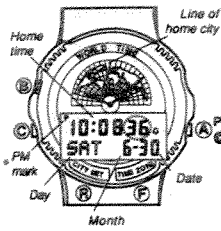


- 1) Press **(C)** six times in the REGULAR TIMEKEEPING MODE to move to the TIME SETTING MODE.
- 2) Press **(A)** in the TIME SETTING MODE to set time and date.
- 3) Press **(P)** or **(M)** on a time signal to correct seconds.
- 4) Press **(C)** to shift flashing digit(s). Digit(s) to be changed will flash.

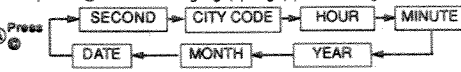

- 5) Press **(P)** to select the time zone and press **(M)** to select the home city code when city code is flashing.
  - \* The lines on the map are not the official "world time zones." Rather, they serve to connect the cities in the same "time zone on the watch."
  - \* See "USING WORLD TIME FUNCTION" for city code setting.
  - \* Press **(A)** to set daylight saving time (display shows "DST" and one hour is added) on or off.
- 6) Press **(C)** to shift flashing digit(s). Each press of **(P)** (or **(M)**) increments (or decrements) digits by one. Hold down for rapid advance.
- 7) Press **(A)** to complete setting.
  - The hour and minute hands are synchronized with the digital display so they are set automatically when regular time is set.

\* Display automatically returns to the regular timekeeping display if left unused for a few minutes.

## ADJUSTING HOUR AND MINUTE HANDS

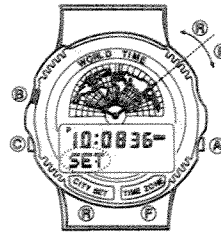

- Should any difference between analog hands and digital time occur, adjust the hands as follows.
- 1) Press **(A)** to adjust the hands. Digital display will show "SET".
  - 2) Press **(P)** (or **(M)**) to advance (or reverse) the hands. Keep pressed for quick advance.
  - 3) Press **(A)** to complete setting.