

Module No. 487/506/526/683

READING THE DISPLAY

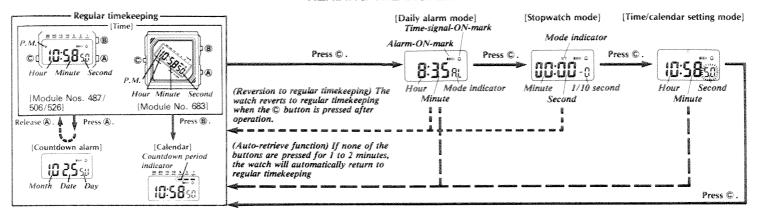

COUNTDOWN ALARM OPERATION

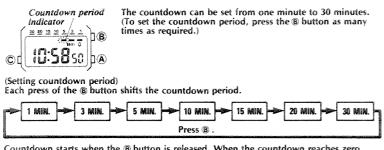

Countdown starts when the ® button is released. When the countdown reaches zero, the alarm will sound for 10 seconds. Pressing any button stops the alarm.

SETTING DAILY ALARM

If the daily alarm is set, the beeper sounds for 20 seconds at the preset time every day until cleared. To stop the beeper, press any button. If the time signal is set, the alarm sounds every hour on the hour. (Sound demonstration) Press and hold the ® button in alarm mode to sound the



Press ® .




835A Press ® to set minute digits Each press of ® advances the alarm setting by 1 minute.

Press ®


If the © button is pressed, the watch reverts to the regular timekeeping mode.

(Quick digit advance) When the & button is pressed for more than 2 seconds, the digit advances quickly. When released, digit advance will stop.

ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL

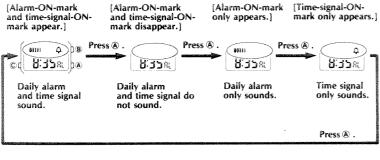


STOPWATCH OPERATION

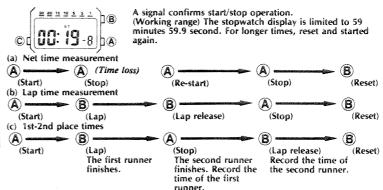

SETTING TIME AND CALENDAR

(1) In the time setting mode, first press (a) on a time signal to correct seconds.



- Each press of ® advances the setting by one. Keep pressed for quick advance.
- (4) Press © to complete setting.