


# ANIMATED WATCH

S 34

## FEATURES:

- Animated display
- Time Display (Hours, Minutes, Seconds and Day of Week)
- Calendar (Month and Date)
- 24 Hour musical alarm
- Chronograph (with lap timed to 1/100 of a second)

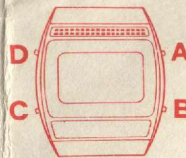

## FEATURE SELECTION:

2:4602

1. Normal mode

6:17

2. Press B once, Month and date appear watch will automatically return to normal mode

6:30 A

3. From normal mode press B twice, Alarm time will be shown

00000

4. Press B again, Chronographs now displayed

## SETTING AND OPERATIONS GUIDE

- Time and Calendar Set

5:36 1Q

1. While in normal mode, press and hold A for five seconds, Second will flash, Press B to zero out seconds

5:36 P

2. Press A Hours will flash Push B to advance digits Continue to hold to button and digits will advance rapidly.

5:36 20

3. Press A Minutes (tens) will flash, Push B to advance digits

5:36 25

4. Press A Minutes (units) will flash, Push B to advance digits

6:17

5. Press A Month will flash, Push B to advance digits

6:17

6. Press A Date will flash, Push B to advance digits

6:17

7. Press A Day of week will flash, Push B to advance day of week flag

### • Alarm Set

6:30 A

1. From normal mode, press B twice, Display will show time alarm is set for

6:30 A

2. Press A once, Hours will flash, Push B to advance digits (AM PM designation will change each time hours pass 12)

7:00 A

3. Press A minutes (tens) will flash, Push B to advance digits

7:00

4. Press A minutes (units) will flash, Push B to advance digits

Alarm )))

5. Press A to end alarm set sequence, Now press C to activate or deactivate alarm, An activated alarm will be shown by alarm symbol ( ))) ) Press B twice to return to normal mode

### • Alarm and Animation Test

1. While in normal mode, press and hold A and B simultaneously.  
2. Press 'A' and 'D' simultaneously to stop the music and animation.

### • Chronograph (Stopwatch)

00000

1. From normal mode, press B three times to enter chronograph mode

001 63

2. Start, Press A to begin

016 72

3. Stop, Press A again, Display will freeze

00000

4. Reset, Press C, Display will reset to zero

### • Split Time

005 73

1. To time more than one competitor in a single event, Press A to start counter for both contestants.

012 61

2. Press C to freeze first competitor's time internal stopwatch is still counting second competitor's time

012 61

3. Press A to freeze second competitor's time

025 04

4. Press C, This will reveal second competitor's time. Press C to reset.

### • Lap time

00160

1. Press A to start counter

012 47

2. Press C to freeze lap time, Watch is continuing its count and will resume displaying elapsed time

025 53

3. When you press C again

031 92

4. Press C, Stopwatch has been continuing internal count and reveals elapsed time whenever C is depressed

036 44

5. Press C to end lap function

00000

6. Then press A, C, C in sequence, Counter will zero out, Press out, Press B to return to normal mode

### • Nightlight

1. Press D for nightviewing.  
NOTE: EXCESSIVE USE OF NIGHT LIGHT WILL SHORTEN BATTERY LIFE

### CHANGING OF BATTERY

Change battery when watch becomes slow the readout darkens or does not appear or nightlight fails, Replace with SR926W or equivalent

### TO CARE FOR WATCH

Use soft damp cloth to clean watch DO NOT submerge watch in water, drop it onto hard surfaces, expose it to extreme temperatures or get strong chemicals (such as cleaning solvents) onto the watch finish.